lenovo

IdeaCentre A520 All-In-One PC
Hardware Maintenance Manual

ideaideaideaCentreidea

Machine Types: 6597/10106 [A520]

lenovo

IdeaCentre A520 All-In-One PC
Hardware Maintenance Manual

Machine Types: 6597/10106 [A520]

First Edition (August 2012)25th

© Copyright Lenovo 2012.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software are delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925

Contents

Chapter 1. About this manual 1
Important Safety Information 1

Chapter 2. Safety information 3
General safety 3
Electrical safety 3
Safety inspection guide 5
Handling electrostatic discharge-sensitive devices 5
Grounding requirements 6
Safety notices 6

Chapter 3. General information 9
Specifications 9

Chapter 4. General Checkout 11

Chapter 5. Using the Setup Utility. . . 13
Starting the Lenovo BIOS Setup Utility program . 13
Viewing and changing settings 13
Using passwords. 13
Enabling or disabling a device 15
Selecting a startup device 16
Exiting the Lenovo BIOS Setup Utility program . . 17

Chapter 6. Symptom-to-FRU Index . . 19
Hard disk drive boot error 19
Power Supply Problems 19
POST error codes 20
Undetermined problems 20

Chapter 7. Locating connectors, controls and components 21

Chapter 8. Replacing hardware 27
General information. 27
Replacing the keyboard and mouse 28
Replacing the power adapter 28
Removing the base cover 30
Replacing the hard disk drive 31
Replacing a memory module 32
Replacing the system fan 33
Replacing the heat-sink 34
Replacing the CPU 35
Replacing the optical drive 37
Replacing the solid state disk 39
Replacing the motherboard. 40
Replacing the speaker system 43
Replacing the TV tuner card 44
Replacing the battery 46
Removing the hinge from the chassis. 47
Removing the rear cover. 49
Replacing the scalar board 50
Replacing the touch control board 51
Replacing the converter board 52
Replacing the power switch board 53
Replacing the Bluetooth module. 54
Replacing the Wi-Fi card. 55
Replacing the camera 56
Replacing the front function board 56
Replacing the LED panel. 57
FRU lists 59

Chapter 9. General information 67
Additional Service Information 67

© Copyright Lenovo 2012

Chapter 1. About this manual

This manual contains service and reference information for IdeaCentre A520 All-In-One computers listed on the cover. It is intended only for trained servicers who are familiar with Lenovo computer products.

Before servicing a Lenovo product, be sure to read the Safety Information.

The description of the TV-tuner card in this manual applies only to computers with a TV-tuner card installed. It does not apply to computers without a TV-tuner card.

Important Safety Information

Be sure to read all CAUTION and DANGER sections in this manual before following any of the instructions.

Veuillez lire toutes les consignes de type DANGER et ATTENTION du présent document avant d'exécuter les instructions.

Lesen Sie unbedingt alle Hinweise vom Typ "ACHTUNG" oder "VORSICHT" in dieser Dokumentation, bevor Sie irgendwelche Vorgänge durchführen

Leggere le istruzioni introdotte da ATTENZIONE e PERICOLO presenti nel manuale prima di eseguire una qualsiasi delle istruzioni

Certifique-se de ler todas as instruções de cuidado e perigo neste manual antes de executar qualquer uma das instruções

Es importante que lea todas las declaraciones de precaución y de peligro de este manual antes de seguir las instrucciones.

执行任何说明之前，请确保已阅读本书中的所有警告和危险声明。

執行任何指示前，請確實閱讀本書中的所有警告及危險聲明。

© Copyright Lenovo 2012

Chapter 2. Safety information

This chapter contains the safety information that you need to be familiar with before servicing a computer.

General safety

Follow these rules to ensure general safety:

- Keep the areas around the computer clear and clean during and after maintenance.
- When lifting any heavy object:
  1. Ensure you can stand safely without slipping.
  2. Distribute the weight of the object equally across both feet.
  3. Lift slowly. Never move suddenly or twist when you attempt to lift.
  4. Lift by standing or by pushing up with your leg muscles; this action removes the strain from the muscles in your back.
     Do not attempt to lift any objects that weigh more than 16 kg (35 lbs.) or objects that you think are too heavy for you.
- Do not perform any action that would create a hazard for the customer, or would make the computer unsafe.
- Before you start the computer, ensure that other service representatives and customer personnel are not in a position that would create a hazard for them.
- Place removed covers and other parts in a safe place, away from all personnel, while you are servicing the computer.
- Keep your tool case away from areas that people may walk through to ensure no-one trips over it.
- Do not wear loose clothing that can be trapped in the moving parts of a machine. Ensure that your sleeves are fastened or rolled up above your elbows. If your hair is long, tie or fasten it back.
- Insert the ends of your necktie or scarf inside clothing or fasten it with a nonconductive clip, approximately 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.
  Remember: Metal objects are good electrical conductors.
- Wear safety glasses when you are: hammering, drilling soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that might be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reattach all covers correctly before returning the computer to the customer.

Electrical safety

CAUTION:
Electrical current from power, telephone, and communication cables can be hazardous. To avoid personal injury or equipment damage, disconnect any attached power cords, telecommunication cables, network cables, and modem cables before you open the computer covers, unless instructed otherwise in the installation and configuration procedures.

© Copyright Lenovo 2012

Observe the following rules when working on electrical equipment.

Important: Use only approved tools and test equipment. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents. Many customers have rubber floor mats near their equipment that contain small conductive fibers to decrease electrostatic discharge.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near equipment that has hazardous voltages.
- Disconnect all power before:
  - Performing a mechanical inspection
  - Working near power supplies
  - Removing or installing Field Replaceable Units (FRUs)
- Before you start to work on the computer, unplug the power cord. If you cannot unplug it, ask the customer to power-off the electrical outlet that supplies power to the machine and to lock the electrical outlet in the off position.
- If you need to work on a computer that has exposed electrical circuits, observe the following precautions:
  - Ensure that another person, familiar with the power-off controls, is near you.
    Remember: Another person must be there to switch off the power, if necessary.
  - Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.
    Remember: There must be a complete circuit to cause electrical shock. By observing the above rule, you may prevent a current from passing through your body.
  - When using a tester, set the controls correctly and use the approved probe leads and accessories for that tester.
  - Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

  Observe the special safety precautions when you work with very high voltages; these instructions are in the safety sections of the maintenance information. Use extreme care when measuring high voltages.
- Regularly inspect and maintain your electrical hand tools to ensure they are safe to use.
- Do not use worn or broken tools and testers.
- *Never assume* that power has been disconnected from a circuit. First, *check* that it has been powered off.
- Always look carefully for possible hazards in your work area. Examples of these hazards are wet floors, non-grounded power extension cables, conditions that may cause or allow power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. This surface is conductive, and touching a live circuit can cause personal injury and damage to the computer.
- Do not service the following parts with the power on when they are removed from their normal operating positions in a computer:
  - Power supply units
  - Pumps
  - Blowers and fans
  - Motor generators

  and similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
  - Use caution; do not become a victim yourself.

– Switch off power.
– Send another person to get medical aid.

Safety inspection guide

The intent of this inspection guide is to assist you in identifying potential hazards posed by these products. Each computer, as it was designed and built, had required safety items installed to protect users and service personnel from injury. This guide addresses only those items. However, good judgment should be used to identify potential safety hazards due to attachment of features or options not covered by this inspection guide.

If any hazards are present, you must determine how serious the apparent hazard could be and whether you can continue without first resolving the problem.

Consider the following items and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock).
- Explosive hazards, such as a damaged CRT face or bulging capacitor
- Mechanical hazards, such as loose or missing hardware

The guide consists of a series of steps presented as a checklist. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Power-off the computer. Disconnect the power cord.
3. Check the power cord for:
   a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and frame ground.
   b. The power cord should be the appropriate type as specified in the parts listings.
   c. Insulation must not be frayed or worn.
4. Remove the cover.
5. Check for any obvious alterations. Use good judgment as to the safety of any alterations.
6. Check inside the unit for any obvious hazards, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
7. Check for worn, frayed, or pinched cables.
8. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling electrostatic discharge-sensitive devices

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the computer, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people while handling the part.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

  Note: The use of a grounding system is desirable but not required to protect against ESD damage.

  – Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
  – Use an ESD common ground or reference point when working on a double-insulated or battery-operated system. You can use coax or connector-outside shells on these systems.
  – Use the round ground-prong of the AC plug on AC-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices

The CAUTION and DANGER safety notices in this section are provided in the language of English.

DANGER

Electrical current from power, telephone and communication cables is hazardous.

To avoid a shock hazard:

- **Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.**
- **Connect all power cords to a properly wired and grounded electrical outlet.**
- **Connect any equipment that will be attached to this product to a properly wired outlet.**
- **When possible, use one hand only to connect or disconnect signal cables.**
- **Never turn on any equipment when there is evidence of fire, water, or structural damage.**
- **Disconnect the attached power cords, telecommunications cables, network cables, and modem cables before you open the device covers, unless instructed otherwise in the installation and configuration procedures.**
- **Connect and disconnect cables as described in the following table when installing, moving, or opening covers on this product or attached devices.**

To Connect	To Disconnect
1. Turn everything OFF. 2. First, attach all cables to devices. 3. Attach signal cables to connectors. 4. Attach power cords to outlet. 5. Turn device ON.	1. Turn everything OFF. 2. First, remove power cords from outlets. 3. Remove signal cables from connectors. 4. Remove all cables from devices.

CAUTION:
When replacing the lithium battery, use only Part Number 45C1566 or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.
Do not:

- **Throw into or immerse in water**
- **Heat to more than 100°C (212°F)**
- **Repair or disassemble**

Dispose of the battery as required by local ordinances or regulations.

CAUTION:
When laser products (such as CD-ROMs, DVD-ROM drives, fiber optic devices, or transmitters) are installed, note the following:

- **Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.**
- **Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.**

DANGER

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following:

These diodes emit radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

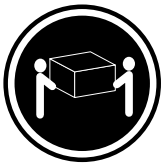		
≥18 kg (37 lbs)	≥32 kg (70.5 lbs)	≥55 kg (121.2 lbs)

CAUTION:
Use safe practices when lifting.

CAUTION:
The power control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

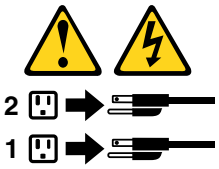

CAUTION:
Do not place any object weighing more than 82 kg (180 lbs.) on top of rack-mounted devices.

Chapter 3. General information

This chapter provides general information that applies to all computer models covered by this manual.

Specifications

This section lists the physical specifications for your computer.

This section lists the physical specifications for your computer.

Type IdeaCentre A520

This section lists the physical specifications.

Environment

Air temperature:

- Operating: 10° to 35°C
- Transit: -20° to 55°C

Humidity:

- Operating: 35% to 80%
- Transit: 20% to 90% (40°C)
- Altitude: 86KPa to 106KPa

Electrical input:

- Input voltage: 90V-264V(AC)
- Input frequency: 47Hz-63Hz

© Copyright Lenovo 2012

Chapter 4. General Checkout

Attention: The drives in the computer you are servicing might have been rearranged or the drive startup sequence may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. Data or programs can be overwritten if you select an incorrect drive.

General error messages appear if a problem or conflict is found by an application, the operating system, or both. For an explanation of these messages, refer to the information supplied with that software package.

Use the following procedure to help determine the cause of the problem:

1. Power-off the computer and all external devices.
2. Check all cables and power cords.
3. Set all display controls to the middle position.
4. Power-on all external devices.
5. Power-on the computer.
   - Look for displayed error codes.
   - Look for readable instructions or a main menu on the display.

   If you did not receive the correct response, proceed to step 6.

   If you did receive the correct response, proceed to step 7.
6. If one of the following happens, follow the instruction given:
   - If the computer displays a POST error, go to “POST error codes”.
   - If the computer hangs and no error is displayed, continue at step 7.
7. If the test stops and you cannot continue, replace the last device tested.

© Copyright Lenovo 2012

Chapter 5. Using the Setup Utility

The Setup Utility program is used to view and change the configuration settings of your computer, regardless of which operating system you are using. However, the operating system settings might override any similar settings in the Setup Utility program.

Starting the Lenovo BIOS Setup Utility program

To start the Lenovo BIOS Setup Utility program, do the following:

1. If your computer is already on when you start this procedure, shut down the operating system and turn off the computer.
2. Press and hold the **F1** key then turn on the computer. When the Lenovo BIOS Setup Utility program is displayed, release the **F1** key.

Note: If a Power-On Password or an Administrator Password has been set, the Setup Utility program menu will not be displayed until you type your password. For more information, see “Using passwords.”

Viewing and changing settings

System configuration options are listed in the Lenovo BIOS Setup Utility program menu. To view or change settings, see “Starting the Setup Utility program.”

You must use the keyboard when using the Lenovo BIOS Setup Utility menu. The keys used to perform various tasks are displayed on the bottom of each screen.

Using passwords

You can use the Lenovo BIOS Setup Utility program to set passwords to prevent unauthorized persons from gaining access to your computer and data. See “Starting the Setup Utility program.” The following types of passwords are available:

- Administrator Password
- Power-On Password

You do not have to set any passwords to use your computer. However, if you decide to set passwords, read the following sections.

Password considerations

A password can be any combination of letters and numbers up to 16 characters (a-z and 0-9). For security reasons, it is a good idea to use a strong password that cannot be easily compromised. We suggest that passwords should follow these rules:

- For a strong password, use 7-16 characters and a mix of letters and numbers.
- Do not use your name or your user name.
- Do not use a common word or a common name.
- Use something significantly different from your previous password.

Attention: Administrator and Power-On passwords are not case sensitive.

© Copyright Lenovo 2012

Administrator Password

Setting an Administrator Password deters unauthorized persons from changing configuration settings. You might want to set an Administrator Password if you are responsible for maintaining the settings of several computers.

After you set an Administrator Password, a password prompt is displayed every time you access the Lenovo BIOS Setup Utility program.

If both the Administrator and Power-On Password are set, you can type either password. However, you must use your Administrator Password to change any configuration settings.

Setting, changing, or deleting an Administrator Password

To set an Administrator Password, do the following:

Note: A password can be any combination of letters and numbers up to 16 characters (a-z and 0-9). For more information, see “Password considerations” on page 13.

1. Start the Lenovo BIOS Setup Utility program (see “Starting the Lenovo BIOS Setup Utility program” on page 13).
2. From the **Security** menu, select **Set Administrator Password** and press the **Enter** key.
3. The password dialog box will be displayed. Type the password then press the **Enter** key.
4. Re-type the password to confirm, then press the **Enter** key. If you typed the password correctly, the password will be installed.

To change an Administrator Password, do the following:

1. Start the Lenovo BIOS Setup Utility program (see “Starting the Lenovo BIOS Setup Utility program” on page 13).
2. From the **Security** menu, select **Set Administrator Password** and press the **Enter** key.
3. The password dialog box will be displayed. Type the current password then press the **Enter** key.
4. Type the new password, then press the **Enter** key. Re-type the new password to confirm it. If you typed the new password correctly, the new password will be installed. A Setup Notice will be displayed confirming that your changes have been saved.
5. Return to the Lenovo BIOS Setup Utility program menu and select the **Exit** option.
6. Select **Save Changes and Exit** from the menu.

To delete a previously set Administrator Password, do the following :

1. Start the Lenovo BIOS Setup Utility program (see “Starting the Lenovo BIOS Setup Utility program” on page 13).
2. From the **Security** menu, select **Set Administrator Password** and press the **Enter** key.
3. The password dialog box will be displayed. Type the current password and press the **Enter** key.
4. Leave each new password line item blank, then press the **Enter** key. A Setup Notice will be displayed confirming that your changes have been saved.
5. Return to the Lenovo BIOS Setup Utility program menu and select the **Exit** option.
6. Select **Save Changes and Exit** from the menu.

Power-On Password

When a Power-On Password is set, you cannot start the Lenovo BIOS Setup Utility program until a valid password is typed from the keyboard.

Setting, changing, or deleting a Power-On Password

Note: A password can be any combination of letters and numbers up to 16 characters (a-z and 0-9).

To set a Power-On Password, do the following:

1. Start the Lenovo BIOS Setup Utility program (see ”Starting the Lenovo BIOS Setup Utility program” on page 13).
2. From the **Security** menu, select **Set Power-On Password** and press the **Enter** key.
3. The password dialog box will be displayed. Type the password, then press the **Enter** key.
4. Re-type the password to confirm it. If you typed the password correctly, the password will be installed.
5. Return to the Lenovo BIOS Setup Utility program menu and select the **Exit** option.
6. Select **Save Changes and Exit** from the menu.

To change a Power-On Password, do the following:

1. Start the Lenovo BIOS Setup Utility program (see ”Starting the Lenovo BIOS Setup Utility program” on page 13).
2. From the **Security** menu, select **Set Power-On Password** and press the **Enter** key.
3. The password dialog box will be displayed. Type the current password then press the **Enter** key.
4. Type the new password, then press the **Enter** key. Re-type the new password to confirm it. If you typed the new password correctly, the new password will be installed. A Setup Notice will be displayed confirming that your changes have been saved.
5. Return to the Lenovo BIOS Setup Utility program menu and select the **Exit** option.
6. Select **Save Changes and Exit** from the menu.

To delete a previously set Power-On Password, do the following :

1. Start the Lenovo BIOS Setup Utility program (see ”Starting the Lenovo BIOS Setup Utility program” on page 13).
2. From the **Security** menu, select **Set Power-On Password** and press the **Enter** key.
3. The password dialog box will be displayed. Type the current password and press the **Enter** key.
4. Leave each new password line item blank, then press **Enter** key. A Setup Notice will be displayed confirming that your changes have been saved.
5. Return to the Lenovo BIOS Setup Utility program menu and select the **Exit** option.
6. Select **Save Changes and Exit** from the menu.

Enabling or disabling a device

The **Devices** options is used to enable or disable user access to the following:	
USB Functions	Select whether to enable or disable **USB** (Universal Serial Bus) functions. If the functions are disabled, no **USB** devices can be used.
SATA Mode	When this feature is set to **Disabled**, all devices connected to the SATA connectors (e.g. hard disk drives or the optical disk drive) are disabled and cannot be accessed.

Onboard Audio Controller	Select whether to enable or disable the **Onboard Audio Controller**. When this feature is set to **Disabled** all devices connected to the audio connectors (e.g. headphones or a microphone) are disabled and cannot be used.
Onboard Ethernet Controller or LAN Boot Agent	Select whether to enable or disable the **Onboard Ethernet Controller**, or select whether to enable or disable load onboard **PXE** (**Preboot Execution Environment**).

To enable or disable a device, do the following:

1. Start the Setup Utility program (see “Starting the Setup Utility program” on page 13).
2. From the Setup Utility program menu, select **Devices**.
3. Select an option as follows:

   Select **USB Setup**, press the **Enter** key, then select **USB Functions**.

   Select **ATA Device Setup**, press the **Enter** key, then select **SATA Mode**.

   Select **Audio Setup**, press the **Enter** key, then select **Onboard Audio Controller**.

   Select **Network Setup**, press the **Enter** key, then select **Onboard Ethernet Support** or **LAN Boot Agent**.
4. Select **Disabled** or **Enabled** and press the **Enter** key.
5. Return to the Lenovo BIOS Setup Utility program menu and select the **Exit** option.
6. Select **Save Changes and Exit** from the menu.

   Notes:

   a. If you do not want to save the settings, select **Discard Changes and Exit** from the menu.

   b. Select IDE/AHCI Mode: Device driver support is required for AHCI. Depending on how the hard disk image was installed, changing this setting may prevent the system from booting.

Selecting a startup device

If your computer does not boot from a device such as the CD/DVD-ROM drive disk or hard disk as expected, follow one of the procedures below.

Selecting a temporary startup device

Use this procedure to start up from any boot device.

Note: Not all CDs, DVDs or hard disk drives are bootable.

1. Turn off your computer.
2. Press and hold the **F12** key then turn on the computer. When the **Startup Device Menu** appears, release the **F12** key.

   Note: If the **Startup Device Menu** does not display using these steps, repeatedly press and release the **F12** key rather than keeping it pressed when turning on the computer.
3. Use ↑ and ↓ arrows to select the desired startup device from the **Startup Device Menu** and press the **Enter** key to begin.

   Note: Selecting a startup device from the **Startup Device Menu** does not permanently change the startup sequence.

Selecting or changing the startup device sequence

To view or permanently change the configured startup device sequence, do the following:

1. Start the Lenovo BIOS Setup Utility program (see “Starting the Lenovo BIOS Setup Utility program” on page 13).
2. From the Lenovo BIOS Setup Utility program main menu, select the **Startup** option.
3. Press the **Enter** key, and select the devices for the **Primary Boot Sequence**. Read the information displayed on the right side of the screen.
4. Use - and ¯ arrows to select a device. Use the **<+>** or **<->** keys to move a device up or down. Use the **<x>** key to exclude the device from or include the device in the boot sequence.
5. Return to the Lenovo BIOS Setup Utility program menu and select the **Exit** option.
6. Select **Save Changes and Exit** from the menu.

   Notes:

   a. If you do not want to save the settings, select **Discard Changes and Exit** from the menu.

   b. If you have changed these settings and want to return to the default settings, select **Load Optimal Defaults** from the menu.

Exiting the Lenovo BIOS Setup Utility program

After you finish viewing or changing settings, press the **Esc** key to return to the Lenovo BIOS Setup Utility program main menu. You might have to press the **Esc** key several times. Do one of the following:

- If you want to save the new settings, select **Save Changes and Exit** from the menu. When the **Save & reset** window shows, select the **Yes** button, and then press the **Enter** key to exit the Lenovo BIOS Setup Utility program.
- If you do not want to save the settings, select **Discard Changes and Exit** from the menu. When the **Reset Without Saving** window shows, select the **Yes** button, and then press the **Enter** key to exit the Lenovo BIOS Setup Utility program.

Chapter 6. Symptom-to-FRU Index

The Symptom-to-FRU index lists error symptoms and possible causes. The most likely cause is listed first. Always begin with Chapter 4, “General Checkout,” on page 11. This index can also be used to help you decide which FRUs to have available when servicing a computer. If you are unable to correct the problem using this index, go to “Undetermined problems” on page 20.

Notes:

- If you have both an error message and an incorrect audio response, diagnose the error message first.
- If you cannot run the diagnostic tests or you get a diagnostic error code when running a test but did receive a POST error message, diagnose the POST error message first.
- If you did not receive any error message look for a description of your error symptoms in the first part of this index.

Hard disk drive boot error

A hard disk drive boot error can have the following causes.

Error	FRU/Action
The startup drive is not included in the boot sequence configuration.	Check the configuration and ensure the startup drive is in the boot sequence.
No operating system is installed on the boot drive.	Install an operating system on the boot drive.
The boot sector on the startup drive is corrupted.	The drive must be formatted. Do the following: 1. Attempt to back up the data on the failing hard disk drive. 2. Use the operating system to format the hard disk drive.
The drive is defective.	Replace the hard disk drive.

Power Supply Problems

Follow these procedures if you suspect there is a power supply problem.

Check/Verify	FRU/Action
Check that the following are properly installed: • Power Cord • On/Off Switch connector • System Board Power Supply connectors • Microprocessor connections	Reseat connectors
Check the power cord.	Power Cord
Check the power-on switch.	Power-on Switch

© Copyright Lenovo 2012

POST error codes

Each time you turn the computer on, it performs a series of tests to check that the system is operating correctly and that certain options are set. This series of tests is called the *Power-On Self-Test*, or *POST*. POST does the following:

- Checks some basic motherboard operations
- Checks that the memory is working correctly
- Starts video operations
- Verifies that the boot drive is working

POST Error Message	Description/Action
Keyboard error	Cannot initialize the keyboard. Make sure the keyboard is properly connected to the computer and that no keys are held pressed during POST. To purposely configure the computer without a keyboard, select **Keyboardless operation** in **Startup** and set the option to **Enabled**. The BIOS then ignores the missing keyboard during POST.
Reboot and Select proper Boot device or Insert Boot Media in selected Boot device	The BIOS was unable to find a suitable boot device. Make sure the boot drive is properly connected to the computer. Make sure you have bootable media in the boot device.

Undetermined problems

1. Power-off the computer.
2. Remove or disconnect the following components (if connected or installed) one at a time.
   a. External devices (modem, printer, or mouse)
   b. Extended video memory
   c. External Cache
   d. External Cache RAM
   e. Hard disk drive
   f. Disk drive
3. Power-on the computer to re-test the system.
4. Repeat steps 1 through 3 until you find the failing device or component.

If all devices and components have been removed and the problem continues, replace the system board.

Chapter 7. Locating connectors, controls and components

This section provides illustrations to help locate the various connectors, controls and components of the computer.

Font view

The following illustration shows the location of controls and components on the front of the computer.

Attention: Be careful not to block any air vents on the computer. Blocked air vents can cause overheating.

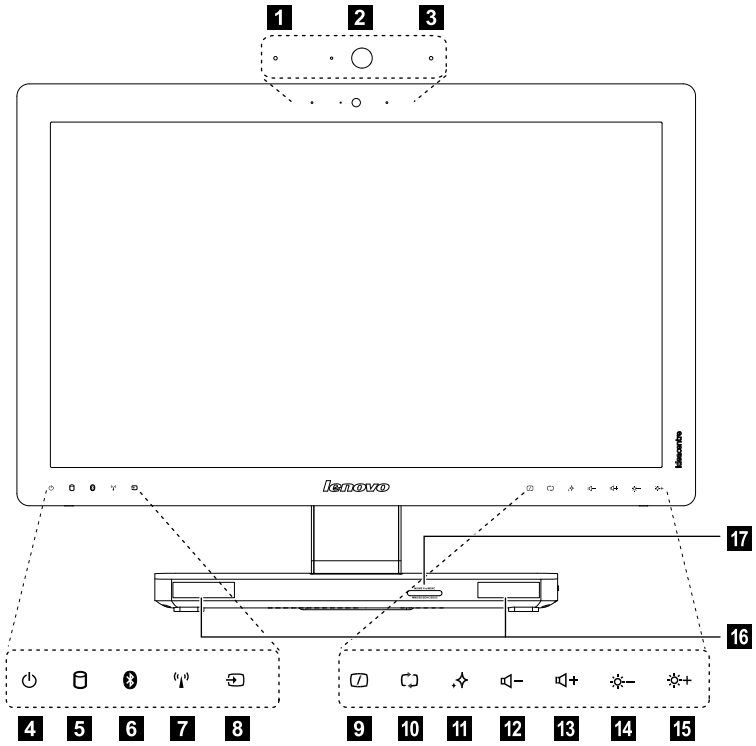

1. Built-in microphone	10. PC mode/HDMI-in/AV-in switch
2. Built-in camera	11. Novo Vision button
3. Built-in microphone (selected models only)	12. Volume down
4. Power indicator	13. Volume up
5. Hard disk drive indicator	14. Brightness down
6. Bluetooth status indicator	15. Brightness up
7. Wi-Fi status indicator	16. Built-in speakers
8. HDMI-in indicator	17. Memory card reader
9. Monitor On/Off	

© Copyright Lenovo 2012

Left and right view

The following illustration shows the location of connectors, controls and components on the left and right side of the computer.

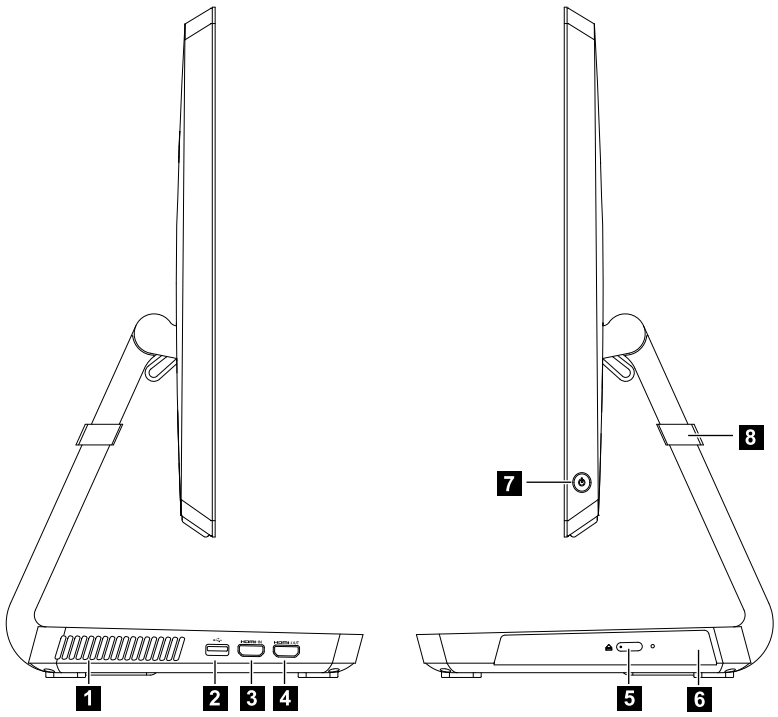

1. Air vents	5. Optical drive eject button
2. USB 3.0 connector	6. Optical drive
3. HDMI-in connector (selected models only)	7. Power button
4. HDMI-out connector	8. Anti-scratch protector

Attention: Do not insert 3-inch discs into the optical drive.

Rear view

The following illustration shows the location of connectors and components on the rear of the computer.

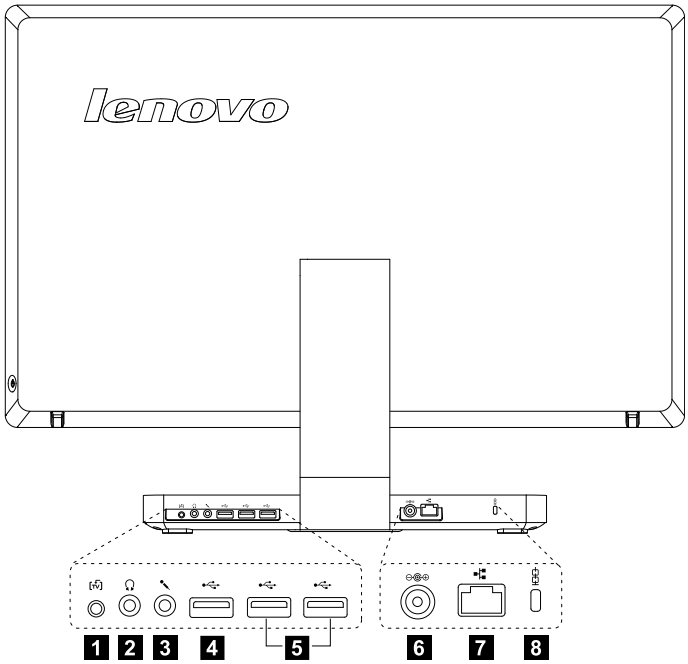

1. TV tuner connector (selected models only)	5. USB 2.0 connectors (2)
2. Headphone connector	6. Power connector
3. Microphone connector	7. Ethernet connector (RJ45)
4. USB 3.0 connector	8. Security cable slot

Hardware components

The following illustration shows the components that make up your computer.

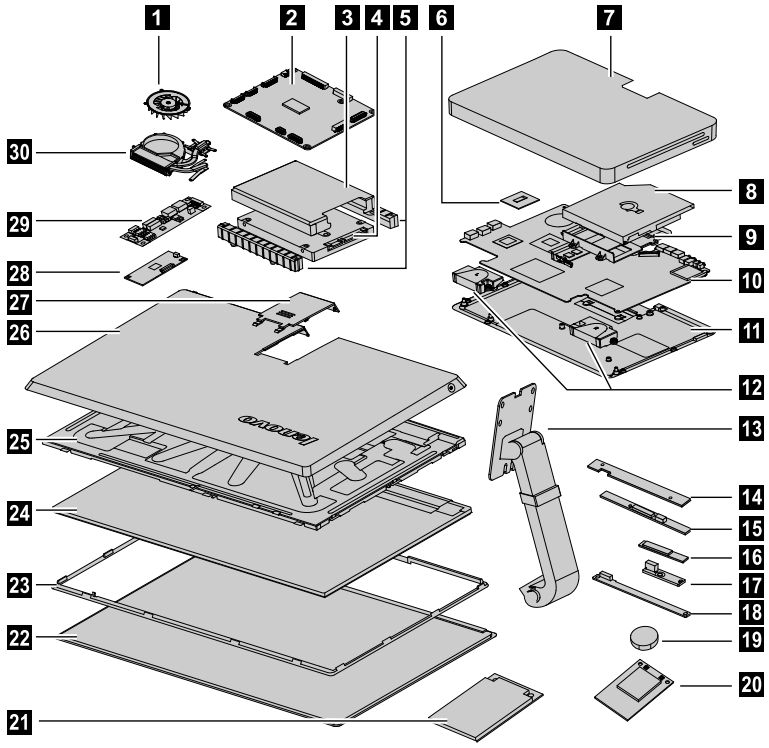

1. System fan	16. Bluetooth module
2. Scalar board	17. Power switch board
3. Hard disk drive bracket	18. Front function board
4. Hard disk drive	19. Battery
5. Hard disk drive rubbers	20. Solid state disk
6. CPU	21. TV-tuner card
7. Base cover	22. Glass
8. Optical drive	23. Panel frame
9. Optical drive bracket	24. LED panel
10. Motherboard	25. Middle frame
11. Chassis	26. Rear cover
12. Speakers	27. Rear cover deco
13. Hinge	28. Touch control board
14. Camera	29. Converter
15. Wi-Fi card	30. Heat-sink

Identifying parts on the motherboard

The motherboard (sometimes called the planar or system board) is the main circuit board in your computer. It provides basic computing functions and supports a variety of devices that are factory-installed or that you can install later. The following illustration shows the location of connectors and components on the front of the motherboard.

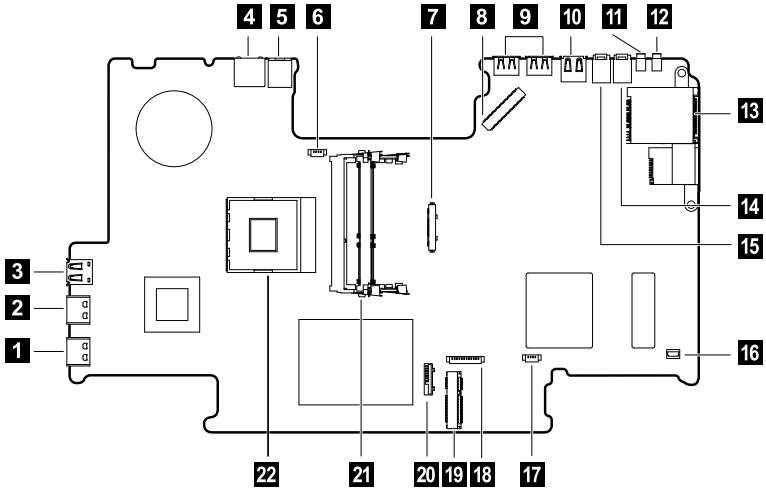

1. HDMI-out connector	12. TV jack 2 (Japan only)
2. HDMI-in connector	13. Card reader
3. USB 3.0 connector	14. Microphone connector
4. Ethernet connector (RJ45)	15. Headphone connector
5. Power connector	16. Optical drive eject button connector
6. System fan connector	17. Speaker connector
7. Scalar cable connector	18. Optical drive connector
8. Scalar cable connector	19. Solid state disk connector
9. USB 2.0 connectors (2)	20. Hard disk drive connector
10. USB 3.0 connector	21. Memory slot
11. TV jack 1	22. CPU socket

The following illustration shows the location of connectors and components on the back of the motherboard.

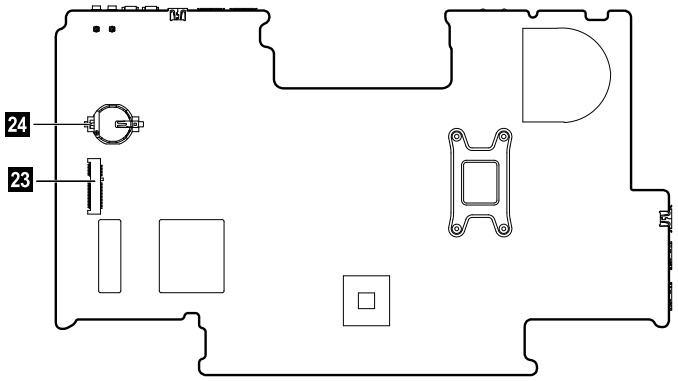

23. TV-Tuner card connector	24. Battery

Chapter 8. Replacing hardware

Attention: Do not remove the computer cover or attempt any repair before reading the “Important safety information” in the Safety and Warranty Guide that was included with your computer. To obtain copies of the Safety and Warranty Guide, go to the Support Web site at: http://support.lenovo.com.

Note: Use only parts provided by Lenovo.

General information

Pre-disassembly instructions

Before starting the disassembly procedure, make sure that you do the following:

1. Turn off the power to the system and all peripherals.
2. Unplug all power and signal cables from the computer.
3. Place the system on a flat, stable surface.

© Copyright Lenovo 2012

Replacing the keyboard and mouse

To replace the keyboard and mouse:

Step 1. Remove any media (disks, CDs, DVDs or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

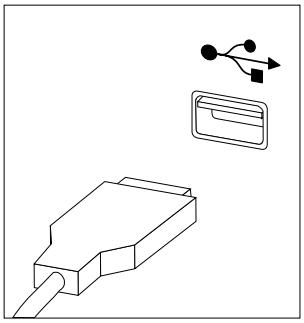

Note: Your keyboard will be connected to a USB connector on one side or at the rear of the computer.

Step 4. Disconnect the defective keyboard cable from the computer and connect the new keyboard cable to the same connector.

Note: The mouse can be replaced using the same method.

Replacing the power adapter

To replace the power adapter:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Locate the connector for the power cord. Refer to “Rear view”.

Step 3. Disconnect the failing power adapter from the computer.

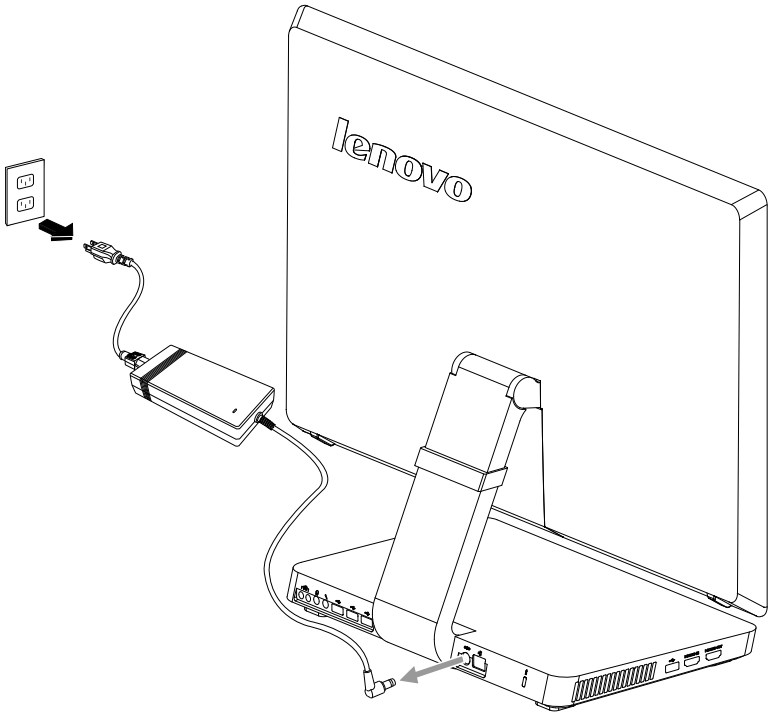

Step 4. To install the new power adapter:

a. Connect the new power adapter to the same connector.

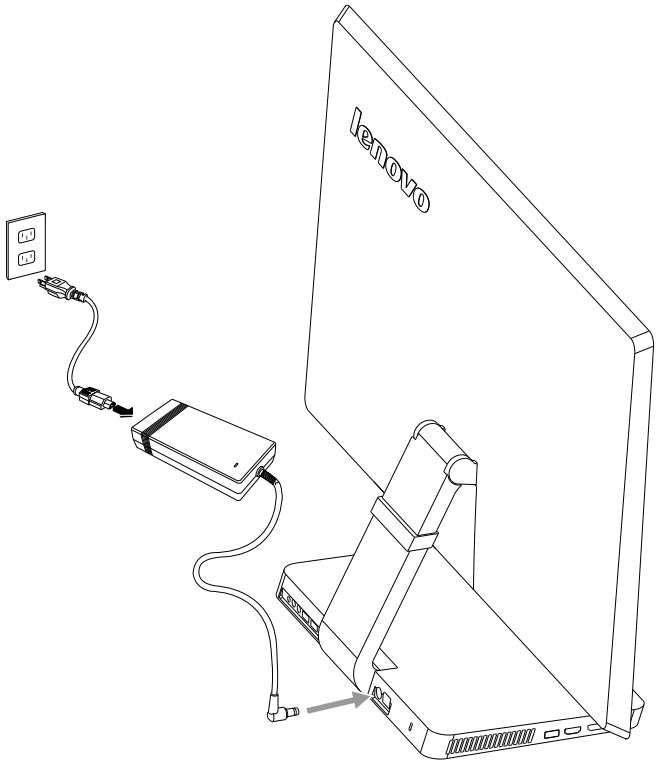

Removing the base cover

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

Note: It may be helpful to place the computer face-down on a soft flat surface for this procedure. Lenovo recommends that you use a blanket, towel, or other soft cloth to protect the computer screen from scratches or other damage.

To remove the base cover:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Place the computer face-down on a soft flat surface, then remove the 7 screws that secure the base cover to the base.

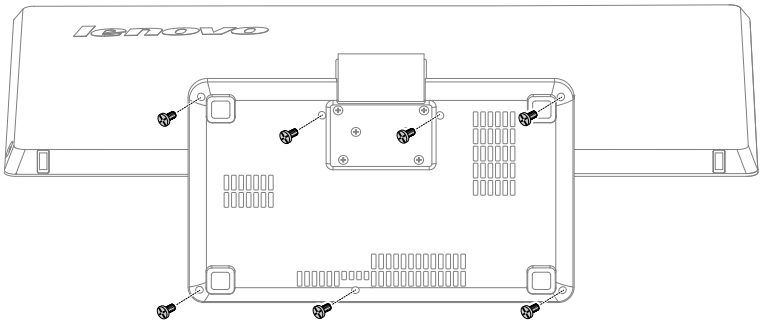

Step 5. Return the computer to an upright position, then lift up the base cover and slide it out as shown.

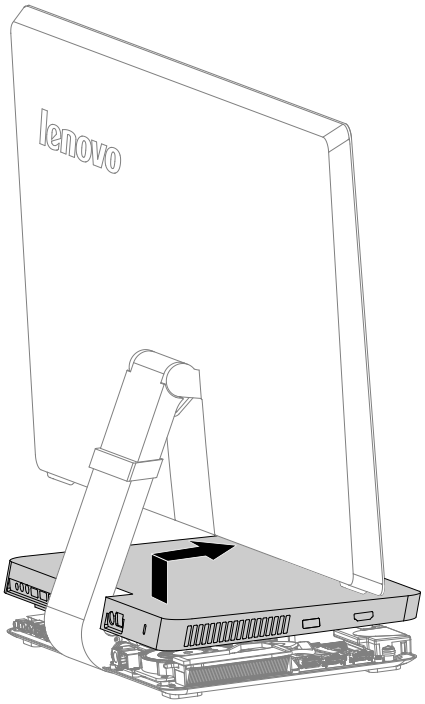

Step 6. To reattach the base cover:

a. Line up the base cover with the base, slide it back and snap it into position.

b. Place the computer face-down on a soft flat surface, then secure the base cover to the base with the 7 screws.

c. Return the computer to an upright position.

Replacing the hard disk drive

Attention: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the hard disk drive:

Step 1. Remove any media (disks, CDs, DVDs or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the 2 screws that secure the hard disk drive to the motherboard. 1

Step 6. Disconnect the data and power cables from the hard disk drive. 2

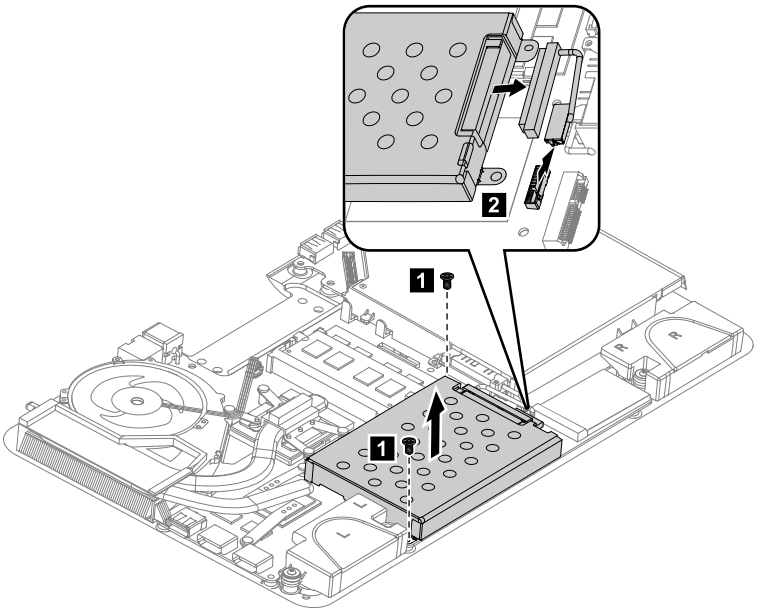

Step 7. Slide the hard disk drive and rubbers out of the bay as shown.

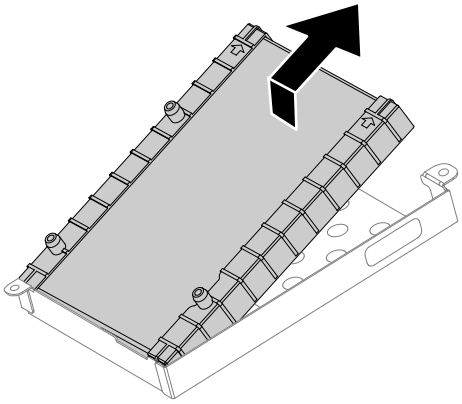

Step 8. Detach the rubbers from the hard disk drive as shown.

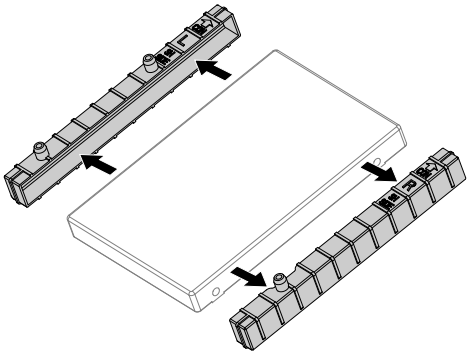

Step 9. Install the new hard disk drive as follows:

a. Attach the rubbers to the new hard disk drive.

b. Slide the new hard disk drive into the hard disk drive bay.

c. Secure the new hard disk drive to motherboard with the 2 screws.

d. Connect the data and power cables to the new hard disk drive and to the connectors on the motherboard.

Step 10. Reattach the base cover and secure it with the screws.

Replacing a memory module

Attention: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace a memory module:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Push out the latches on both sides of the memory socket to release the memory module. Gently pull the memory module upward to remove it from its socket.

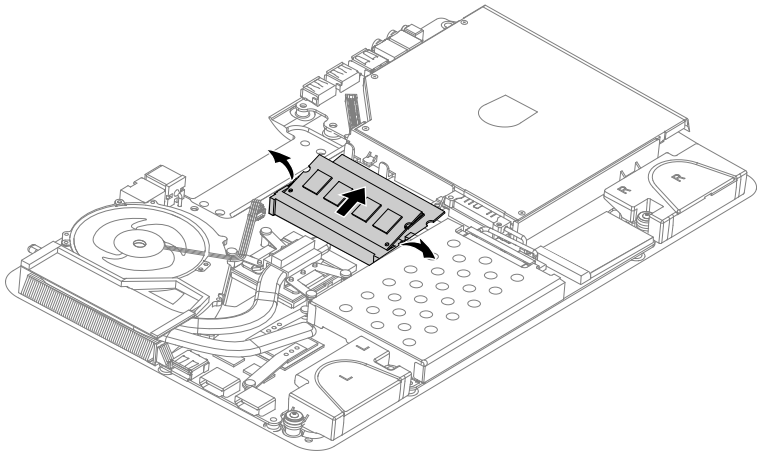

Step 6. To install the new memory module:

a. Align the new memory module with the memory socket, then insert it and push down on the top edge.

b. Make sure the latches lock the memory module in place.

Step 7. Reattach the base cover and secure it with the screws.

Replacing the system fan

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the system fan:

Step 1. Remove any media (disks, CDs, DVDs or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the 3 screws that secure the system fan to the heat-sink. 1

Step 6. Disconnect the power cable from the motherboard. 2

Step 7. Lift up the system fan to remove it. 3

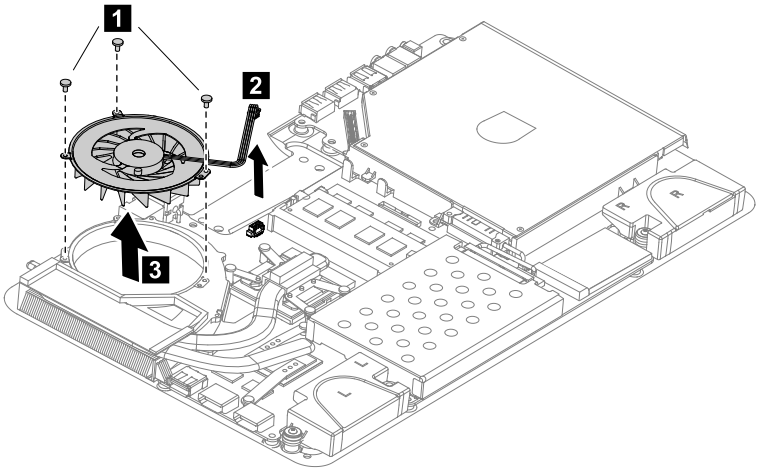

Step 8. To install the new system fan:

a. Line up the new system fan with the mounting holes on the heat-sink and place it into position.

b. Secure the new system fan to the heat-sink with the 3 screws.

c. Connect the new power cable to the connector on motherboard.

Step 9. Reattach the base cover and secure it with the screws.

Replacing the heat-sink

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the heat-sink:

Step 1. Remove any media (disks, CDs, DVDs or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the system fan. Refer to “Replacing the system fan”.

Step 6. Remove the 9 screws that secure the heat-sink to the motherboard.

Step 7. Lift up the heat-sink to remove it.

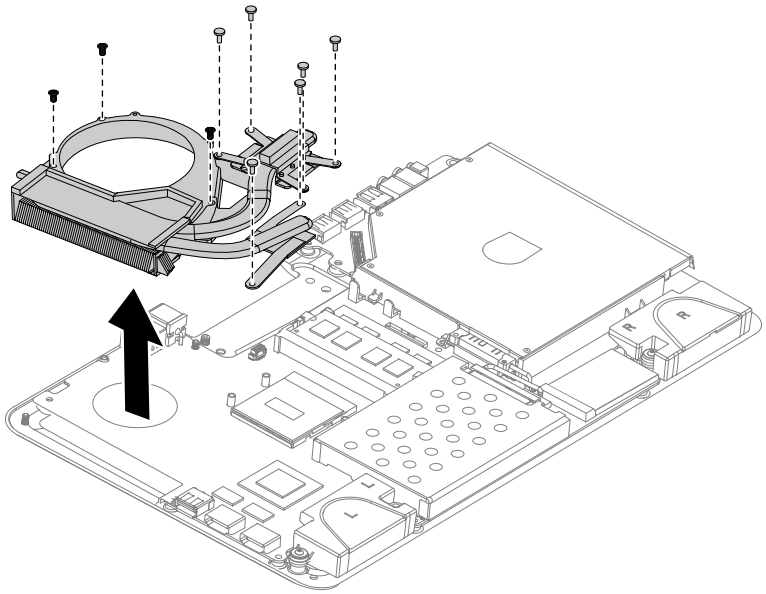

Attention: Place the heat-sink upside down on a flat surface to prevent thermal grease from contaminating other components.

Step 8. To install the new heat-sink:

a. Use an alcohol pad to wipe the thermal grease off the CPU.

b. Line up the new heat-sink with mounting holes on the motherboard.

c. Secure the new heat-sink to the motherboard with the 9 screws.

d. Attach the system fan to the new heat-sink and secure it with the screws.

Step 9. Reattach the base cover and secure it with the screws.

Replacing the CPU

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the CPU

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the system fan. Refer to “Replacing the system fan”.

Step 6. Remove the heat-sink. Refer to “Replacing the heat-sink”.

Step 7. Use a flat head screwdriver to turn the CPU lock screw counterclockwise to unlock the CPU. 1 2

Step 8. Lift the microprocessor straight up and out of the socket. 3

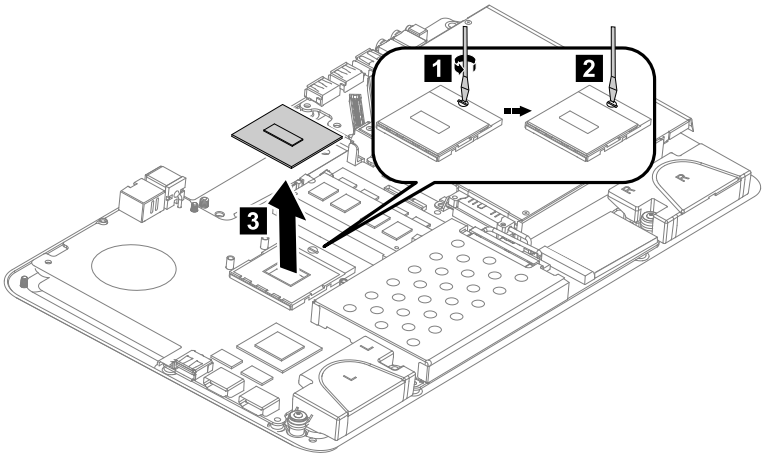

Attention: Do not touch the gold contacts on the bottom of the microprocessor. When handling the microprocessor, touch only the sides.

Note: Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

Step 9. Holding the sides of the microprocessor with your fingers, remove the protective cover 1 that protects the gold contacts on the new microprocessor. 2

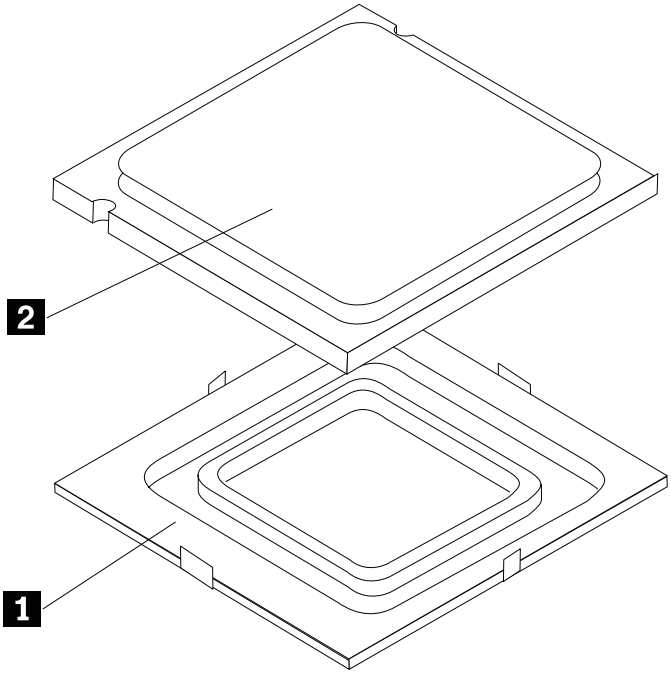

Step 10. Holding the sides of the microprocessor with your fingers, position the microprocessor so that the notches on the microprocessor are aligned with the tabs in the microprocessor socket.

Important: To avoid damaging the microprocessor contacts, keep the microprocessor completely level while installing it into the socket.

Step 11. Lower the microprocessor straight down into its socket on the motherboard. 1

Step 12. To secure the microprocessor by turning the CPU lock screw clockwise to lock the CPU into position. 2 3

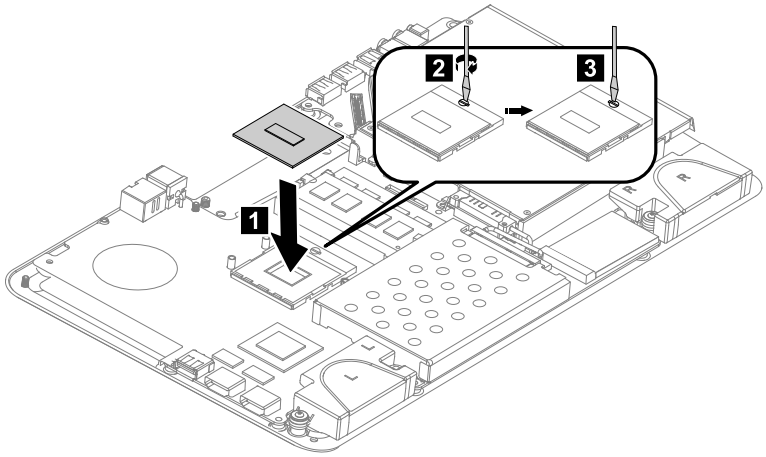

Step 13. Use a thermal grease syringe to place 5 drops of grease on the top of the microprocessor. Each drop of grease should be 0.03 ml (3 tick marks on the grease syringe).

Step 14. Reattach the system fan, heat-sink, and base cover, then secure them with the screws.

Replacing the optical drive

Attention: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the optical drive:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Disconnect the optical drive data cable from the connector on the motherboard.

Step 6. Remove the 3 screws that secure the optical drive to the motherboard and lift the optical drive up to remove it.

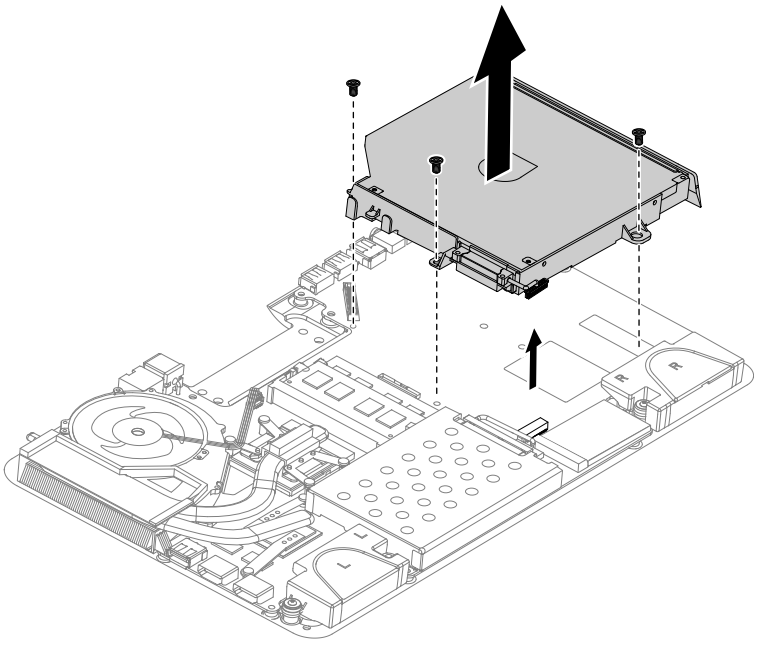

Step 7. Remove the 4 screws that secure the optical drive to the bracket and disconnect the data connector from the rear of optical drive.

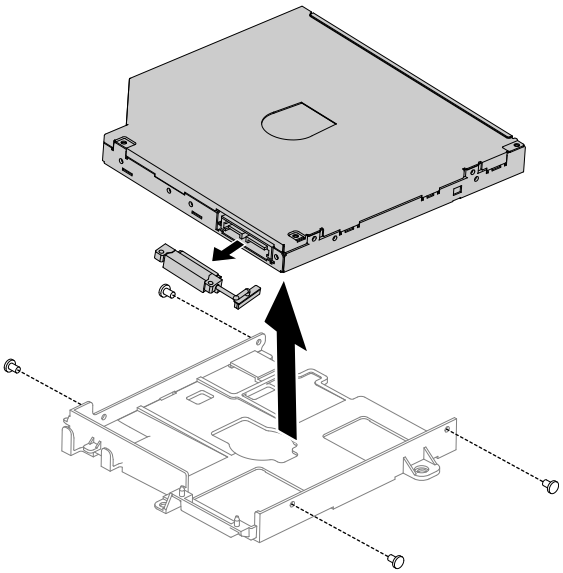

Step 8. Use a small flat head screwdriver to press and push out the pins that secure the cover to the drive. 1 2

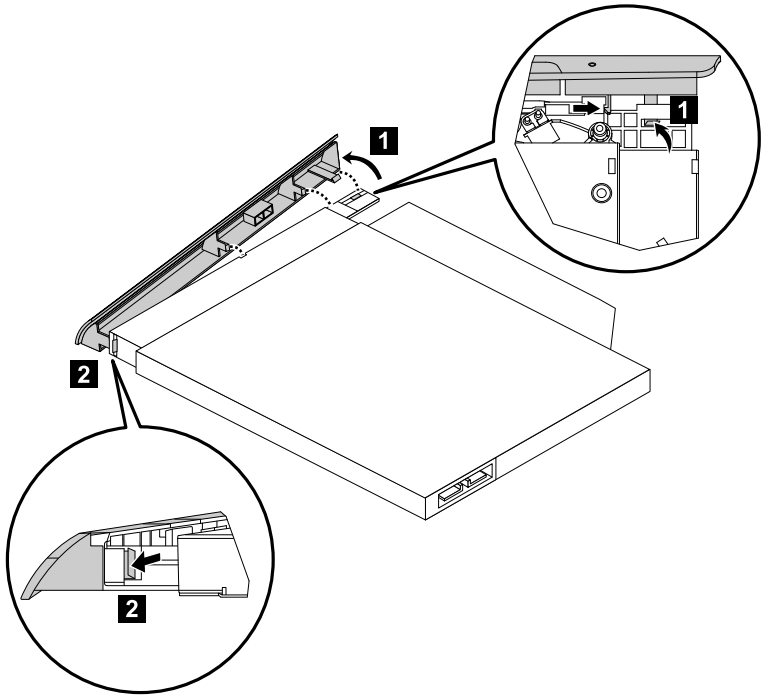

Step 9. Separate the cover from the defective optical drive.

Step 10. Install the new optical drive as follows:

a. Align the new optical drive with the cover, and then attach the cover to the new optical drive.

b. Connect the data connector to the new optical drive.

c. Align the new optical drive with the bracket, push it into position and secure it with the 4 screws.

d. Line up the optical drive bracket with the mounting holes on the motherboard and secure it with the 3 screws.

e. Reconnect the data cable to the connector on the motherboard.

Step 11. Reattach the base cover and secure it with the screws.

Replacing the solid state disk

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the solid state disk:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the 2 screws that secure the solid state disk to the motherboard.

Step 6. Pull the solid state disk upward to remove it from the card port.

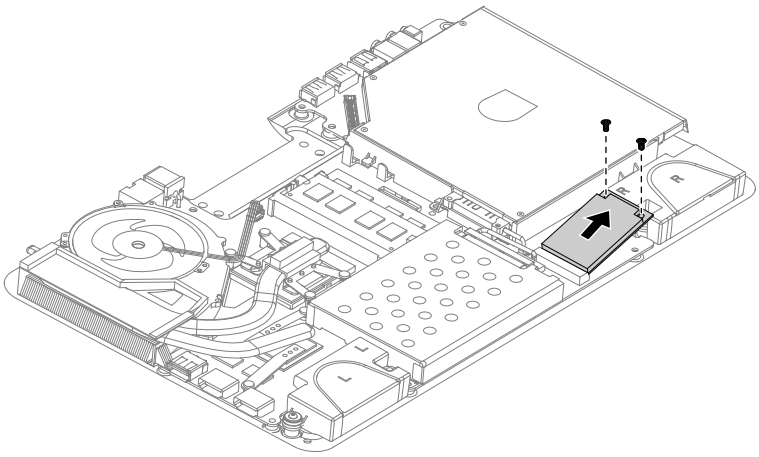

Step 7. To install the new solid state disk:

a. Insert the notched end of the new solid state disk into the card port on the motherboard.

b. Secure the new solid state disk to the motherboard using the 2 screws.

Step 8. Reattach the base cover and secure it with the screws.

Replacing the motherboard

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the motherboard:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hard disk drive. Refer to “Replacing the hard disk drive”.

Step 6. Remove all memory modules. Refer to “Replacing a memory module”.

Step 7. Remove the optical drive. Refer to “Replacing the optical drive”.

Step 8. Remove the system fan. Refer to “Replacing the system fan”.

Step 9. Remove the heat-sink. Refer to “Replacing the heat-sink”.

Step 10. Remove the CPU. Refer to “Replacing the CPU”.

Step 11. Remove the solid state disk. Refer to “Replacing the solid state disk”.

Step 12. Remove all the cables connected to the motherboard.

Step 13. Remove the 4 screws that secure the speakers, then detach them from the chassis and put them aside.

Step 14. Remove the 7 screws that secure the motherboard to the chassis and slide it out as shown.

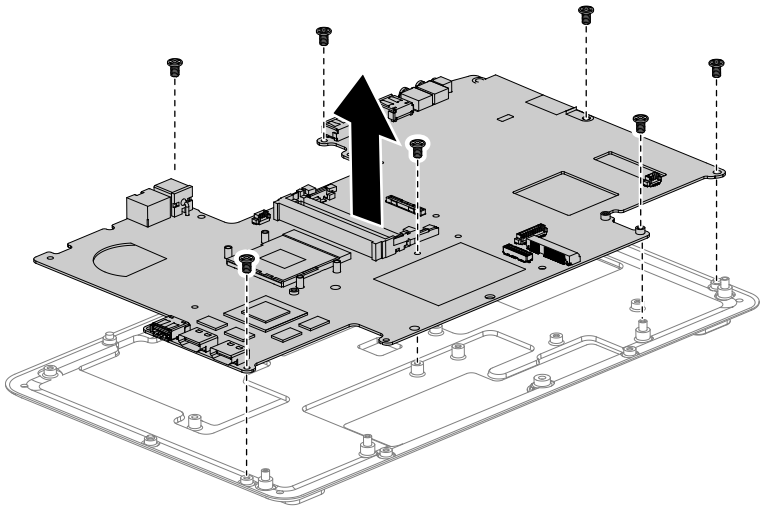

Step 15. Remove the 2 screws that secure the TV-Tuner card to the motherboard.

Step 16. Disconnect the antenna cable(s) from the TV-Tuner card.

Step 17. Pull the TV-Tuner card upward to remove it from the card port.

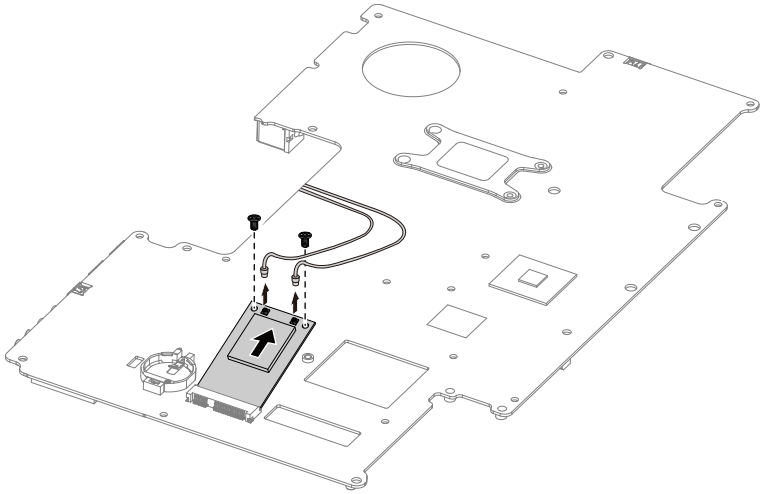

Step 18. Use a flat head screwdriver as a lever to prise out the battery gently as shown.

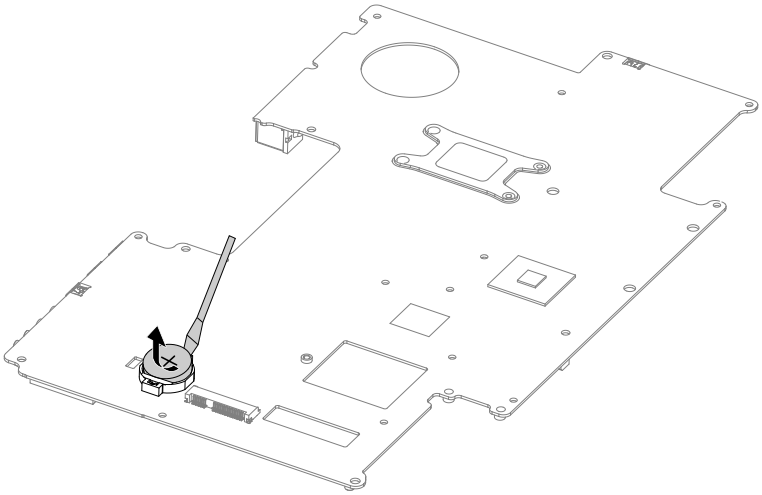

Step 19. To install the new motherboard:

a. Insert the battery (CR2032) into the socket with the side labeled “+” facing up, and press the battery into place.

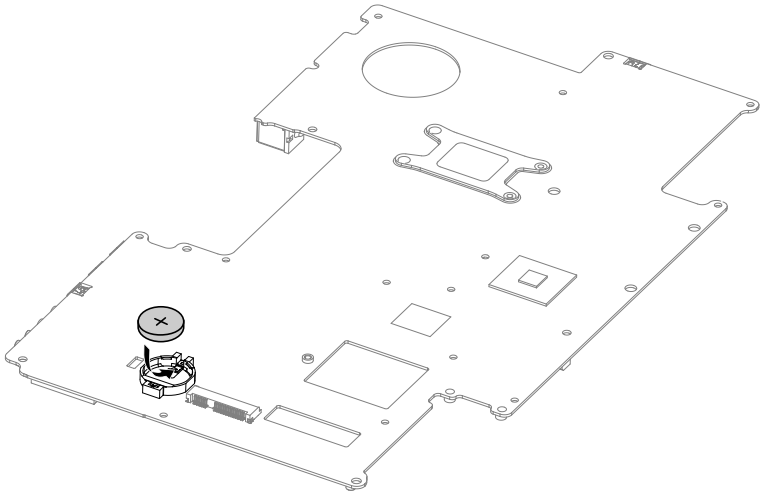

b. Insert the notched end of the TV-Tuner card into the card port on the new motherboard and secure it with the 2 screws.

c. Connect the antenna cable(s) to the TV-Tuner card.

d. Line up the new motherboard with the chassis and slide it into position. Align the holes on the new motherboard with the mounting holes on the chassis and secure it to the chassis with the screws.

e. Attach the speakers to the chassis with the screws.

f. Attach the solid state disk, optical drive, CPU, heat-sink, system fan, memory module, and hard disk drive to the new motherboard.

g. Connect all the cables to the new motherboard.

Step 20. Reattach the base cover and secure it with the screws.

Replacing the speaker system

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the speaker system:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hard disk drive. Refer to “Replacing the hard disk drive”.

Step 6. Remove the optical drive. Refer to “Replacing the optical drive”.

Step 7. Remove the system fan. Refer to “Replacing the system fan”.

Step 8. Remove the heat-sink. Refer to “Replacing the heat-sink”.

Step 9. Remove all the cables connected to the motherboard.

Step 10. Remove the 4 screws that secure the speakers, then detach the speakers from the chassis and put them aside.

Step 11. Remove the 7 screws that secure the motherboard to the chassis and slide it out as shown.

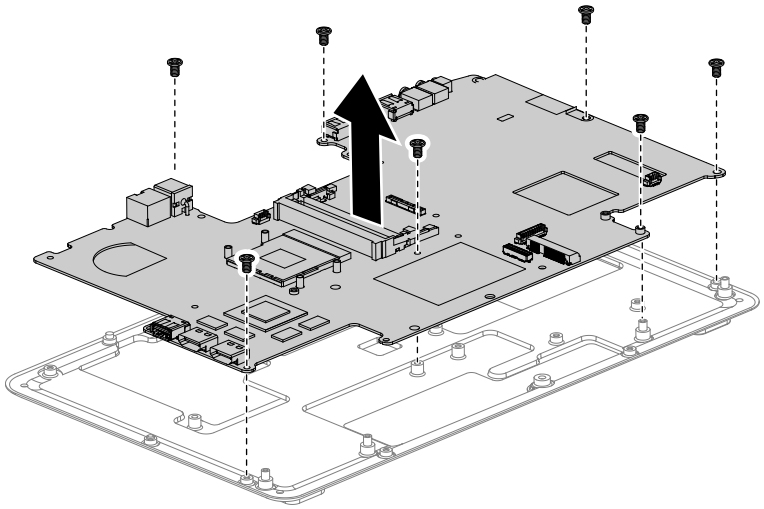

Step 12. Detach the speakers from the chassis.

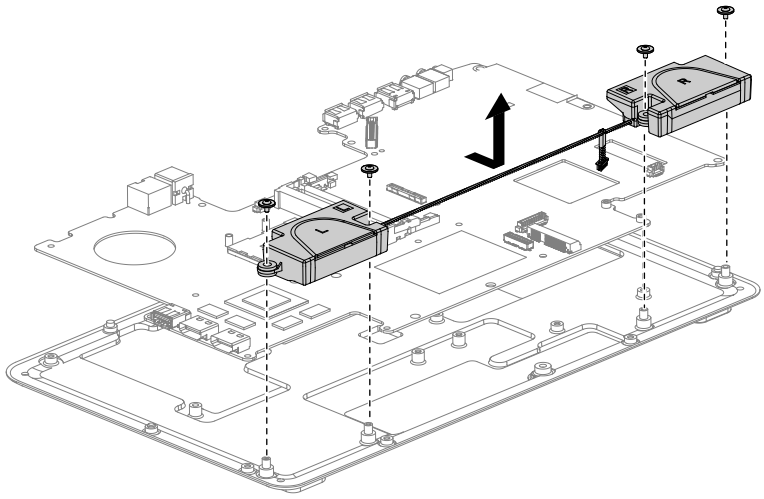

Step 13. To install the new speaker system:

a. Attach the new speaker cable to the chassis.

b. Line up the motherboard with the chassis and slide it into position. Align the holes on the motherboard with the mounting holes on the chassis and secure it to the chassis with the 7 screws.

c. Line up the new speaker system with the mounting holes on the chassis and secure the new speaker system with the 4 screws.

d. Connect the new speaker cable to the connector on the motherboard.

Step 14. Reattach the optical drive, heat-sink, system fan, and hard disk drive to the motherboard.

Step 15. Reattach the base cover and secure it with the screws.

Replacing the TV tuner card

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the TV tuner card:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hard disk drive. Refer to “Replacing the hard disk drive”.

Step 6. Remove the optical drive. Refer to “Replacing the optical drive”.

Step 7. Remove the system fan. Refer to “Replacing the system fan”.

Step 8. Remove the heat-sink. Refer to “Replacing the heat-sink”.

Step 9. Remove all the cables connected to the motherboard.

Step 10. Remove the 4 screws that secure the speakers, then detach them from the chassis and put them aside.

Step 11. Remove the 7 screws that secure the motherboard to the chassis and slide it out as shown.

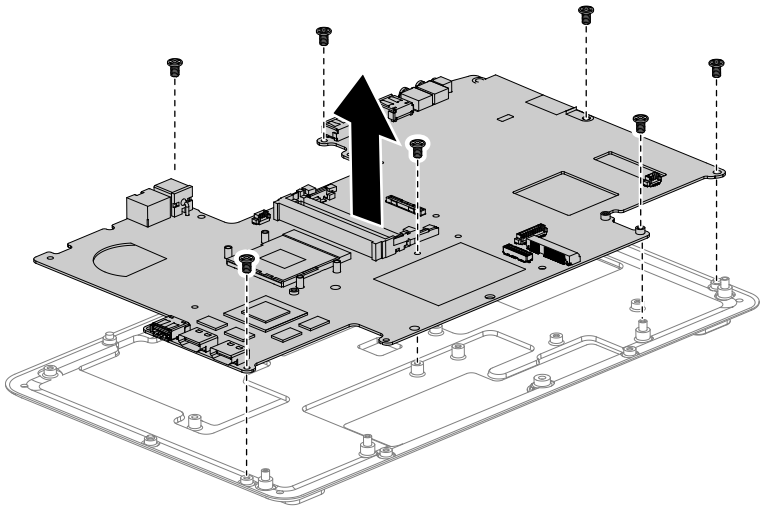

Step 12. Remove the 2 screws that secure the TV-Tuner card to the motherboard.

Step 13. Disconnect the antenna cable(s) from the TV-Tuner card.

Step 14. Pull the TV-Tuner card upward to remove it from the card port.

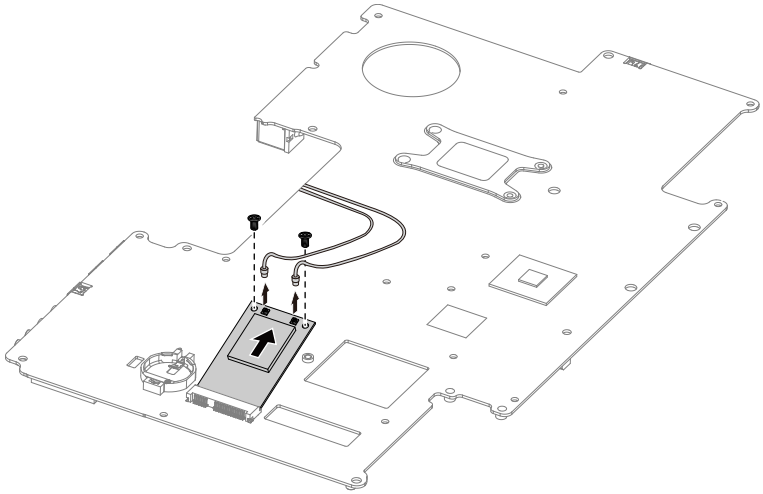

Step 15. To install the new TV-Tuner card:

a. Insert the notched end of the TV-Tuner card into the card port.

b. Secure the new TV-Tuner card to the motherboard with the 2 screws.

c. Connect the antenna cable(s) to the new TV-Tuner card.

Step 16. Line up the motherboard with the chassis and slide it into position. Align the holes on the motherboard with the mounting holes on the chassis and secure the motherboard to the chassis with the 7 screws.

Step 17. Reattach the speaker system, optical drive, heat-sink, system fan, and hard disk drive to the motherboard.

Step 18. Reconnect all the cables to the motherboard.

Step 19. Reattach the base cover and secure it with the screws.

Replacing the battery

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the battery:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hard disk drive. Refer to “Replacing the hard disk drive”.

Step 6. Remove the optical drive. Refer to “Replacing the optical drive”.

Step 7. Remove the system fan. Refer to “Replacing the system fan”.

Step 8. Remove the heat-sink. Refer to “Replacing the heat-sink”.

Step 9. Remove all the cables connected to the motherboard.

Step 10. Remove the 4 screws that secure the speakers, then detach the speakers from the chassis and put them aside.

Step 11. Remove the 7 screws that secure the motherboard to the chassis and slide it out as shown.

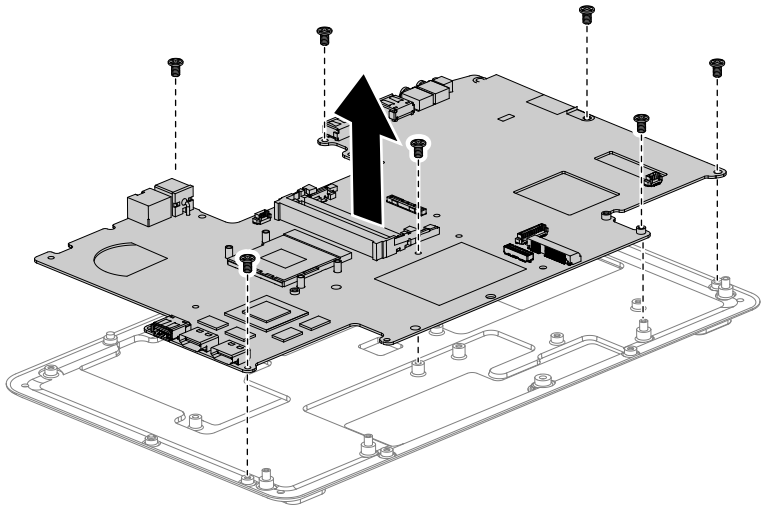

Step 12. Use a flat head screwdriver as a lever to prise out the battery as shown.

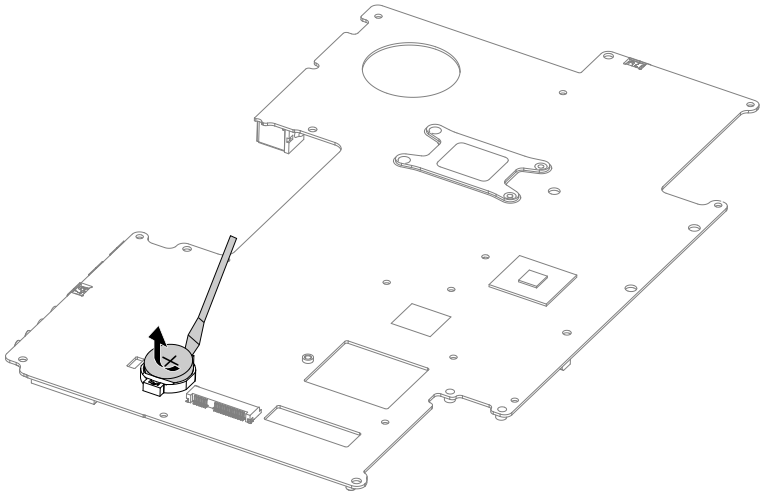

Step 13. To install the new battery:

a. Insert the new battery (CR2032) into the socket with the side labeled “+” facing up, and press the battery into place.

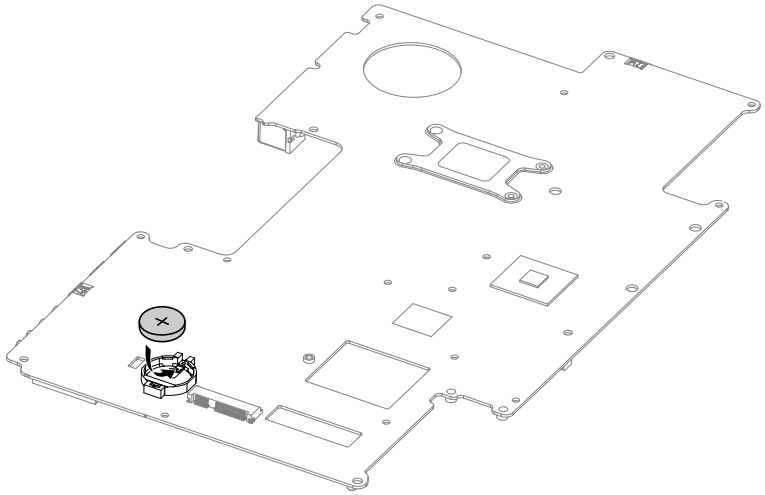

Step 14. Line up the motherboard with the chassis and slide it into position. Align the holes on the motherboard with the mounting holes on the chassis and secure it to the chassis with the screws.

Step 15. Reattach the speaker system, optical drive, heat-sink, system fan, and hard disk drive to the motherboard.

Step 16. Reconnect all the cables to the motherboard.

Step 17. Reattach the base cover and secure it with the screws.

Removing the hinge from the chassis

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To remove the hinge from the chassis:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Disconnect the scalar headphone input, scalar and DVI/HDMI cables from the connectors on the motherboard.

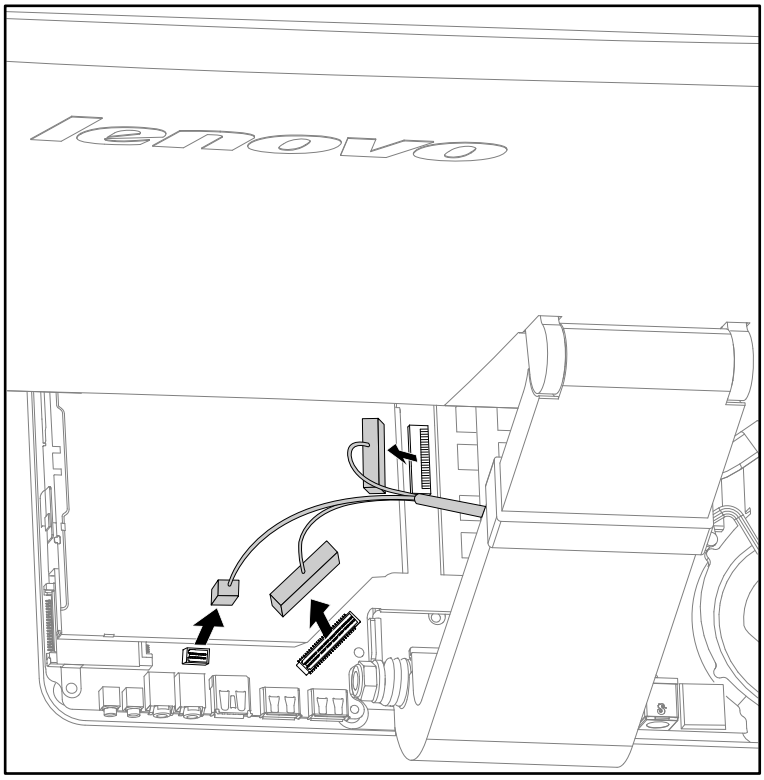

Step 6. Remove the 6 screws that secure the hinge to the chassis **1** , then lift up the hinge to remove it from the chassis. **2**

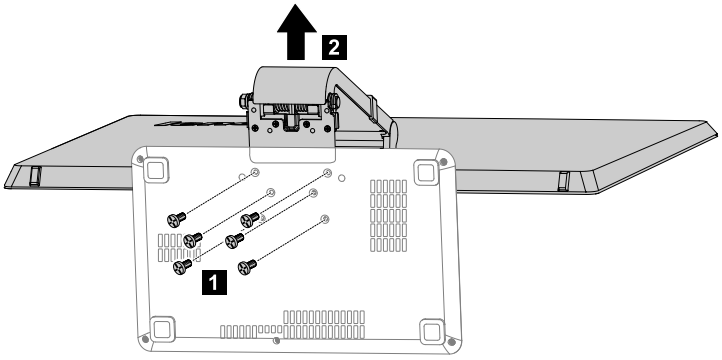

Step 7. To reattach the hinge to the chassis:

a. Line up the hinge with the chassis and slide the hinge into position.

b. Secure the hinge to the chassis with the 6 screws.

c. Reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 8. Reattach the base cover and secure it with the screws.

Removing the rear cover

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To remove the rear cover:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Raise the hinge 1 and slide the rear deco out as shown. 2

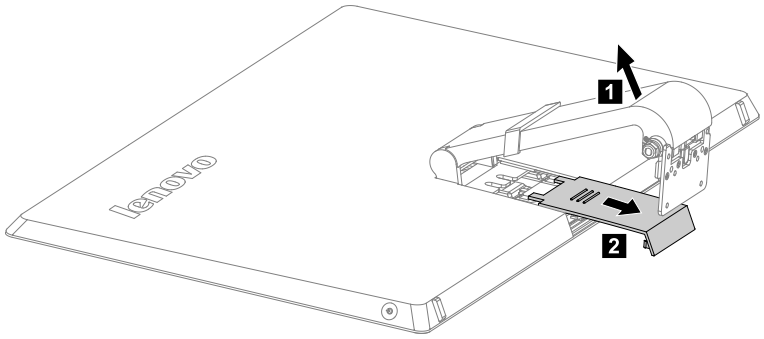

Step 7. Put the head of a flat head screwdriver between the middle frame and the rear cover as shown. Then using the screwdriver as a lever and the middle frame metal bar as the fulcrum, prise the rear cover away from the middle frame. 1

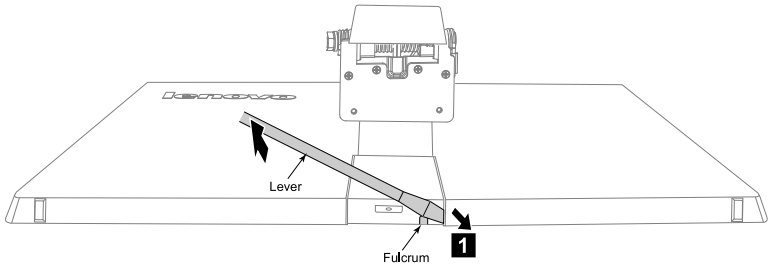

Step 8. Working around the edge in an anti-clockwise direction, use your fingers to prise up the rear cover. The rear cover is pinned into place, use short, sharp movements to prise it up. 2

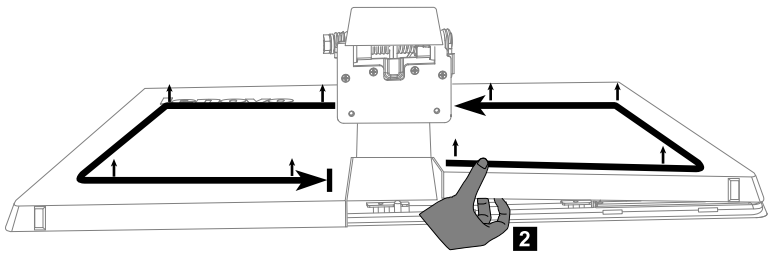

Step 9. Press down the hinge and slide out the rear cover.

Step 10. To reattach the rear cover:

a. Raise the hinge, line up the rear cover with the LED panel and slide it back into position.

b. Press the edge of rear cover to lock the cover to the LED panel with the pins.

c. Slide the rear deco back into position.

Step 11. Reattach the hinge to the chassis, and reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 12. Reattach the base cover and secure it with the screws.

Replacing the scalar board

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the scalar board:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Disconnect all the cables from the scalar board. **1**-**11**

Step 8. Remove the 5 screws that secure the scalar board to the middle frame and lift it up to remove it.

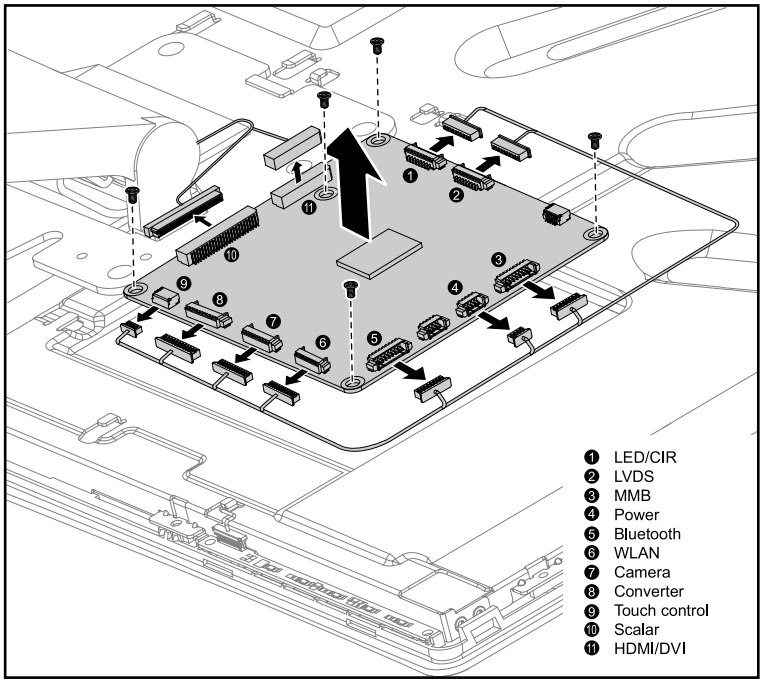

Step 9. To install the new scalar board:

a. Line up the holes on the new scalar board with the mounting holes on the middle frame and secure the new scalar board with the 5 screws.

b. Connect all the cables to the new scalar board.

Step 10. Reattach the rear cover to the LED panel.

Step 11. Reattach the hinge to the chassis, and reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 12. Reattach the base cover and secure it with the screws.

Replacing the touch control board

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the touch control board:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Disconnect all the touch cables from the touch control board.

Step 8. Lift up the touch control board to remove it from the middle frame.

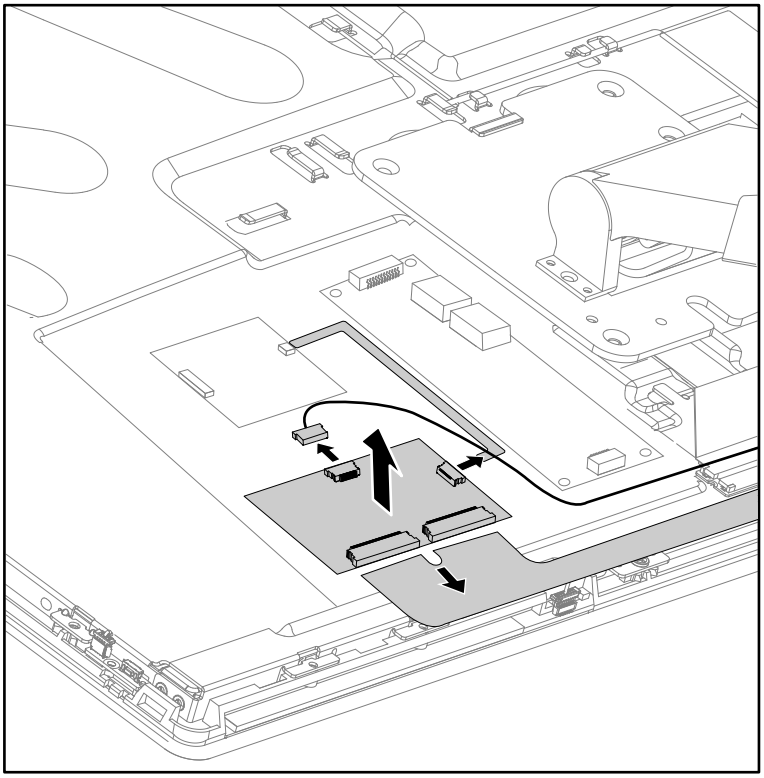

Step 9. To install the new touch control board:

a. Connect all the cables to the new touch control board.

b. Remove the insulating paper (siliconed paper) of the double sided tape on the new touch control board.

c. Line up the new touch control board with the mounting marks on the middle frame, then stick it to the middle frame.

Step 10. Reattach the rear cover to the LED panel.

Step 11. Reattach the hinge to the chassis, and reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 12. Reattach the base cover and secure it with the screws.

Replacing the converter board

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the converter board:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Remove the 4 screws that secure the converter board to the middle frame.

Step 8. Disconnect the 2 cables from the converter board.

Step 9. Lift up the converter board to remove it.

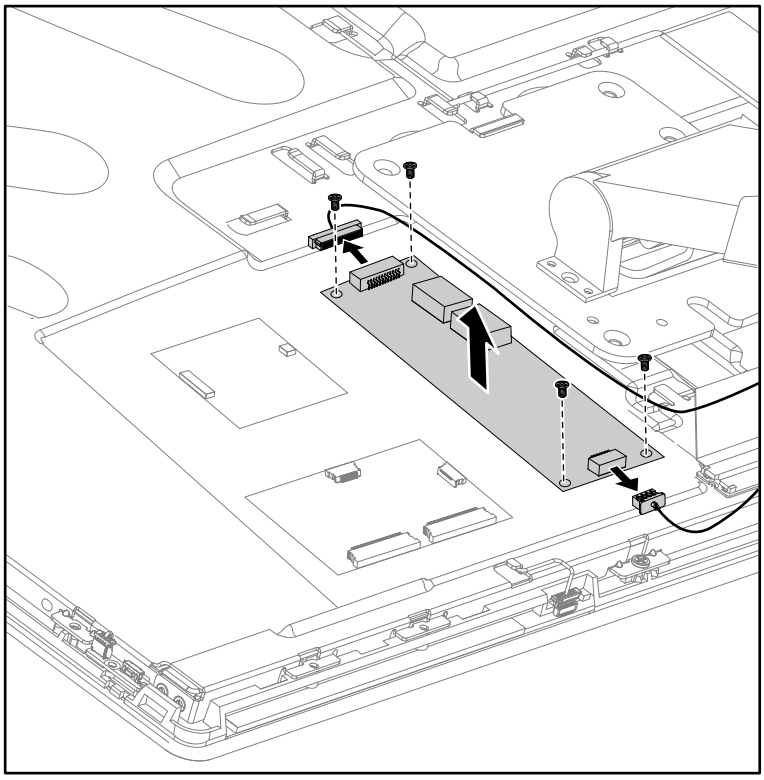

Step 10. To install the new converter board:

a. Line up the holes on the new converter board with the mounting holes on the middle frame and secure it with the 4 screws.

b. Connect the 2 cables to the new converter board.

Step 11. Reattach the rear cover to the LED panel.

Step 12. Reattach the hinge to the chassis, and reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 13. Reattach the base cover and secure it with the screws.

Replacing the power switch board

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the power switch board:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Disconnect the power cable from the power switch board.

Step 8. Remove the screw that secures the power switch board to the LED panel and lift up the power switch board to remove it.

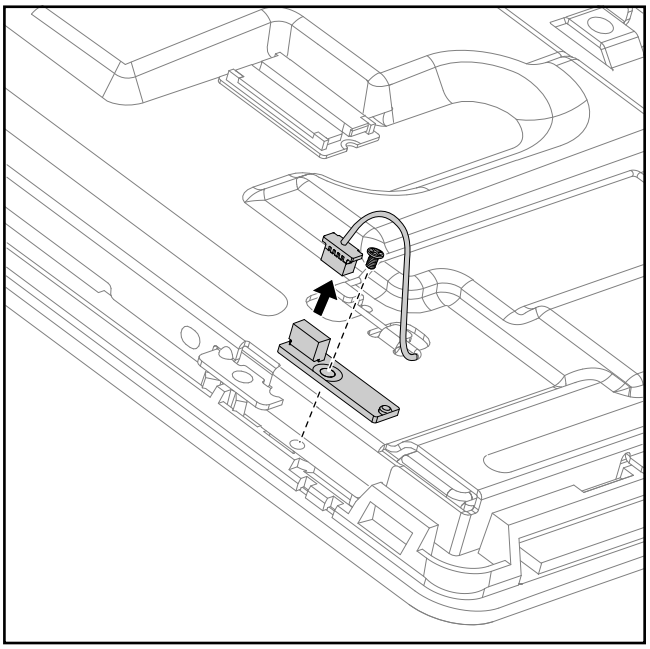

Step 9. To install the power switch board:

a. Line up the hole on the new power switch board with the mounting hole on the LED panel and secure it with the screw.

b. Connect the power cable to the new converter board.

Step 10. Reattach the rear cover to the LED panel.

Step 11. Reattach the hinge to the chassis, and reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 12. Reattach the base cover and secure it with the screws.

Replacing the Bluetooth module

Attention: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the Bluetooth module:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Push the pins out to release the Bluetooth module, then lift it up to remove it from the socket. 1 2

Step 8. Disconnect the cable from the Bluetooth module. 3

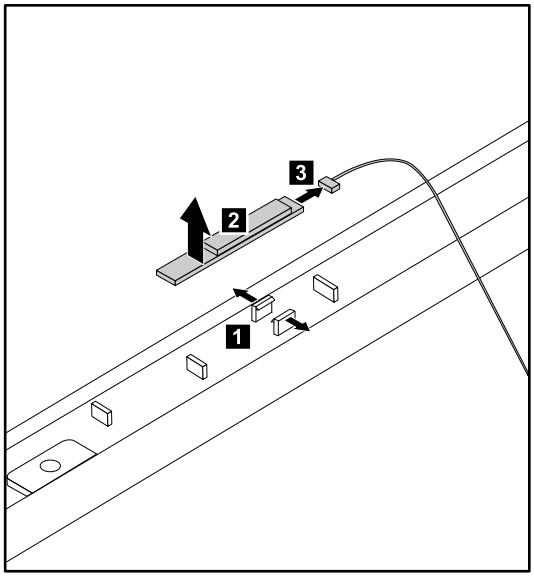

Step 9. To install the new Bluetooth module:

a. Connect the cable to the new Bluetooth module.

b. Line up the new Bluetooth module with the socket, snap it into position and secure it with the pins.

Step 10. Reattach the rear cover to the LED panel.

Step 11. Reattach the hinge to the chassis, and reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 12. Reattach the base cover and secure it with the screws.

Replacing the Wi-Fi card

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the Wi-Fi card:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Use a small flat head screwdriver to prise the Wi-Fi card away from the socket. 1 2

Step 8. Disconnect the antenna cable 3 and data cable 4 from the Wi-Fi card.

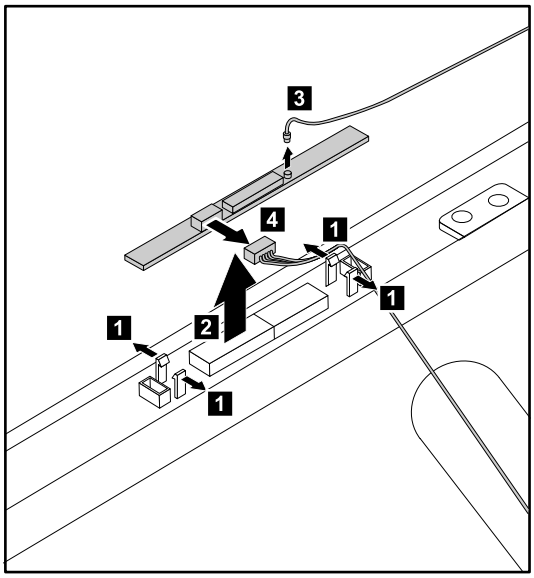

Step 9. To install the new Wi-Fi card:

a. Connect the data cable to the new Wi-Fi card.

b. Line up the new Wi-Fi card with the socket, snap it into position and secure it with the pins.

c. Reconnect the antenna cable to the new Wi-Fi card.

Step 10. Reattach the rear cover to the LED panel.

Step 11. Reattach the hinge to the chassis, and reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 12. Reattach the base cover and secure it with the screws.

Replacing the camera

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the camera:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Remove the 2 screws that secure the camera to the front bezel. 1

Step 8. Lift up the camera 2 and disconnect the data cable from the camera. 3

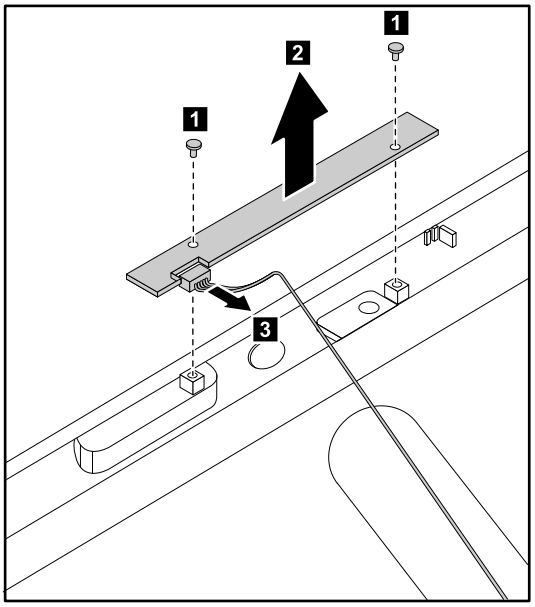

Step 9. To install the new camera:

a. Connect the data cable to the new camera.

b. Line up the holes in the new camera with the mounting holes on the front bezel and secure the new camera with the 2 screws.

Step 10. Reattach the rear cover to the LED panel.

Step 11. Reattach the hinge to the chassis.

Step 12. Reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 13. Reattach the base cover and secure it with the screws.

Replacing the front function board

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

To replace the front function board:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Remove the 2 screws that secure the front function board to the front bezel. 1

Step 8. Disconnect the data cable from the front function board. 2

Step 9. Lift up the front function board to remove it from the front bezel. 3

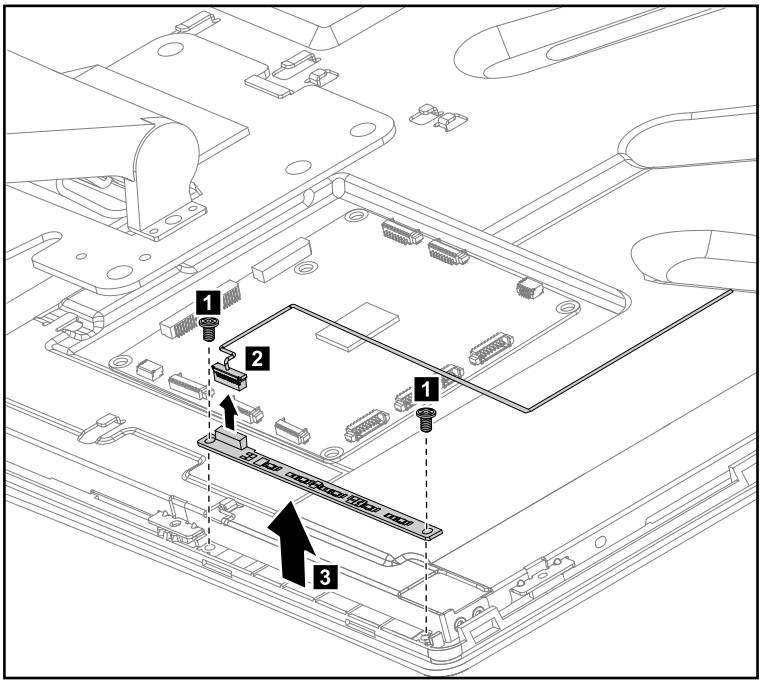

Step 10. To install the new front function board:

a. Connect the data cable to the new front function board.

b. Line up the holes in the new front function board with the mounting holes on the front bezel and secure it with the 2 screws.

Step 11. Reattach the rear cover to the LED panel.

Step 12. Reattach the hinge to the chassis.

Step 13. Reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 14. Reattach the base cover and secure it with the screws.

Replacing the LED panel

Note: Turn off the computer and wait 3 to 5 minutes to let it cool down before removing the base cover.

Note: It may be helpful to place the computer face-down on a soft flat surface for this procedure. Lenovo recommends that you use a blanket, towel, or other soft cloth to protect the computer screen from scratches or other damage.

To replace the LED panel:

Step 1. Remove any media (disks, CDs, DVDs, or memory cards) from the drives, shut down the operating system, and turn off the computer and all attached devices.

Step 2. Unplug all power cords from electrical outlets.

Step 3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to “Left and right view” and “Rear view” for help with locating the various connectors.

Step 4. Remove the base cover. Refer to “Removing the base cover”.

Step 5. Remove the hinge from the chassis. Refer to “Removing the hinge from the chassis”.

Step 6. Remove the rear cover. Refer to “Removing the rear cover”.

Step 7. Remove the scalar board. Refer to “Replacing the scalar board”.

Step 8. Remove the touch control board. Refer to “Replacing the touch control board”.

Step 9. Remove the converter board. Refer to “Replacing the converter board ”.

Step 10. Remove the power switch board. Refer to “Replacing the power switch board”.

Step 11. Remove the Bluetooth module. Refer to “Replacing the Bluetooth module”.

Step 12. Remove the Wi-Fi card. Refer to “Replacing the Wi-Fi card”.

Step 13. Remove the Wi-Fi antenna cable from the front bezel.

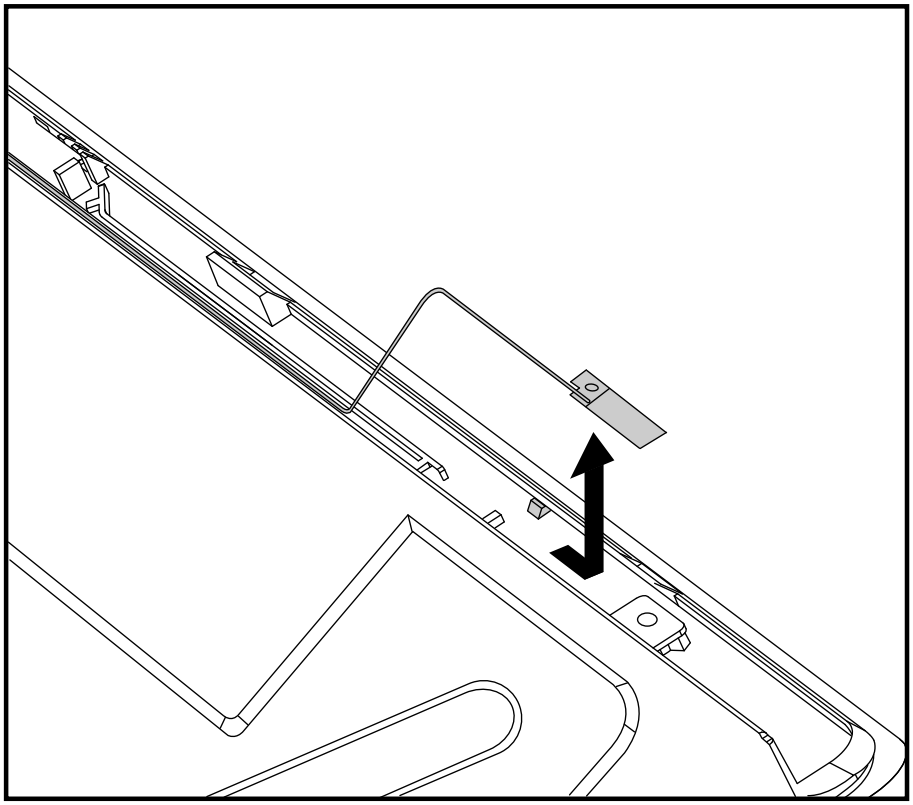

Step 14. Remove the camera. Refer to “Replacing the camera”.

Step 15. Remove the front function board. Refer to “Replacing the front function board”.

Step 16. Remove all the cables attached to the middle frame and the front bezel.

Step 17. Remove the 5 screws that secure the hinge to the middle frame and set the hinge aside.

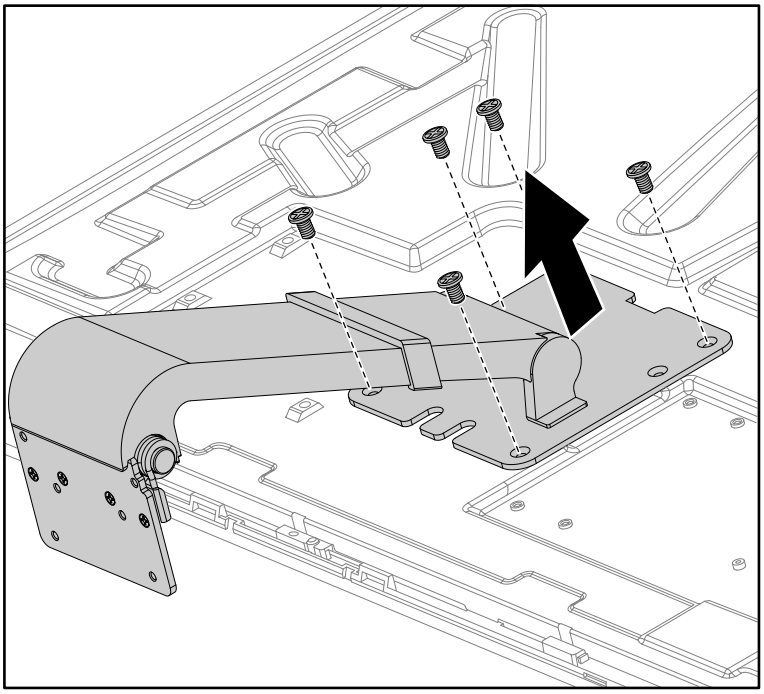

Step 18. To install the new the LED panel:

a. Line up the holes on the hinge with the mounting holes on the new middle frame and secure it with 5 screws.

b. Attach all the cables to the new LED panel middle frame and front bezel.

c. Attach the Wi-Fi card, Bluetooth module, power switch board, converter board, touch control board, scalar board and front function board to the new LED panel middle frame and connect all the cables to the new LED panel.

Step 19. Reattach the rear cover to the LED panel.

Step 20. Reattach the hinge to the chassis.

Step 21. Reconnect the scalar headphone input, scalar and DVI/HDMI cables to the motherboard.

Step 22. Reattach the base cover and secure it with the screws.

FRU lists

This chapter lists the information on the field replaceable units (FRUs).

Attention: Be sure to read and understand all the safety information before replacing any FRUs.

Notes: FRUs that have a 1 or 2 in the CRU column are Customer Replaceable Units (CRUs).

- **1**– identifies parts that are fairly simple to replace, requiring few or no tools.
- **2**– identifies parts that are slightly more difficult to replace.
- **N**-identifies parts that are not to be replaced by the customer.

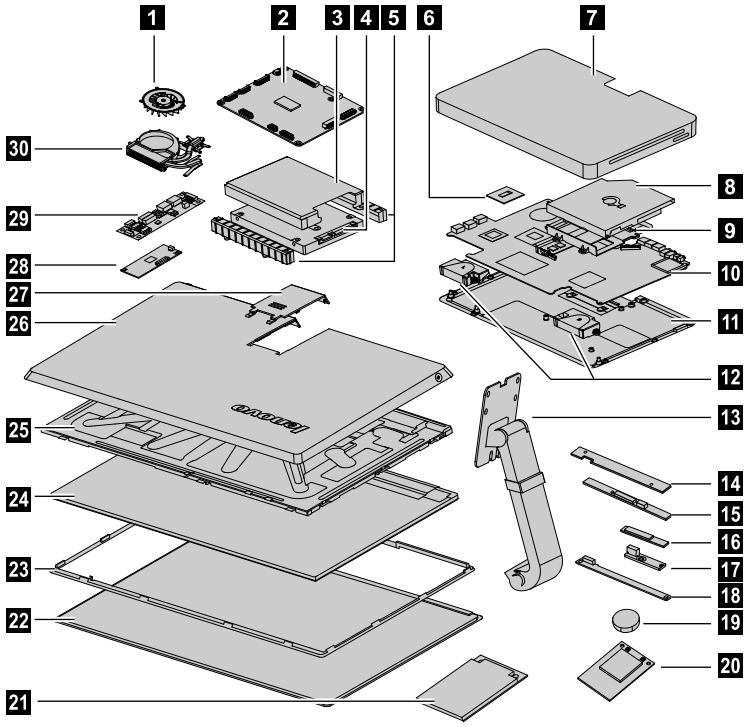

Item #	Name	Part Description (English)	FRU #	CRU ID
10	Motherboard	A520 WIN8 UMA W/HDMI W/TV MB	90001180	N
		A520 WIN8 UMA W/HDMI W/O TV MB	90001181	N
		A520 WIN8 UMA W/O HDMI W/TV MB	90001182	N
		A520 WIN8 UMA W/O HDMI W/O TV MB	90001183	N
		A520 WIN8 1G_GPU W/HDMI W/TV MB	90001184	N
		A520 WIN8 1G_GPU W/HDMI W/O TV MB	90001185	N
		A520 WIN8 1G_GPU W/O HDMI W/TV MB	90001186	N
		A520 WIN8 1G_GPU W/O HDMI W/O TV MB	90001187	N
		A520 WIN8 2G_GPU W/HDMI W/TV MB	90001188	N
		A520 WIN8 2G_GPU W/HDMI W/O TV MB	90001189	N
		A520 WIN8 2G_GPU W/O HDMI W/TV MB	90001190	N
		A520 WIN8 2G_GPU W/O HDMI W/O TV MB	90001191	N
30	Heat-sink	A520 Coolermaster DIS 45W Heat Sink	90201509	N
		A520 Coolermaster UMA 45W Heat Sink	90201510	N
		A520 AVC DIS 45W Heat Sink	90201511	N
		A520 AVC UMA 45W Heat Sink	90201512	N
1	System fan	A720 Delta DIS 45W Fan	90200584	N
		A720 AVC DIS 45W Fan	90201256	N
15	Wi-Fi card	A720 Wlan Card	90000171	N
29	Converter	A720 Converter	90000215	N

17	Power switch board	A720 Power Board	90000214	N
18	Front function board	A720 LED Function Board	90000216	N
2	Scalar board	A520 Scalar Board	90001192	N
28	Touch control board	A520 Touch Control Board	90001193	N
22-25	LCD Module	A520 LCD Module For LG	90400073	N
	Cables	A720 HDD Cable	90200731	N
		A720 ODD Cable	90200732	N
		A520 Touch Cable	90202011	N
		A520 MMB Cable	90202012	N
		A520 Panel Back Light Cable	90202013	N
		A520 Converter Cable	90202014	N
		A520 Power Switch Cable	90202015	N
		A520 LVDS Cable	90202016	N
		A520 LED Board Cable	90202017	N
		A520 Camera Cable	90202018	N
		A520 BT Cable	90202019	N
		A520 WLAN Data Cable	90202020	N
		A520 Scalar Board Cable	90202021	N
		A720 TV-Tunner Cable For NTSL	90201142	N
		A720 TV-Tunner Cable For PAL	90201143	N
		A520 Wlan Anntena	90202022	N
12	Speakers	A720 Speaker(L+R)	90200743	N
13	Hinge	A520 STAND	90202023	N
26	Rear cover	A520 Rear Cover	90202024	N
9	ODD bracket	A520 ODD Frame	90202025	N
11	Chassis	A520 Base Bottom	90202026	N
	Front function board bracket	A520 MMB Board Bracket	90202027	N
7	Base cover	A520 Base Cover W/HDMI W/TV	90202028	N
		A520 Base Cover W/O HDMI W/TV	90202029	N
		A520 Base Cover W/HDMI W/O TV	90202030	N
		A520 Base Cover W/O HDMI W/O TV	90202031	N
	ODD cover	A520 ODD Bezel	90202032	N
27	Rear cover deco	A520 Rear Deco Cover	90202033	N
3	HDD bracket	A720 HDD Bracket	90200753	N

	CPU	Intel i3-3110M 2.4GHz 3MB 2c L1 PGAProcessor	102500303	N
		Intel i5-3210M 2.5GHz 3MB 2c L1 PGAProcessor	102500301	N
		Intel i5-3360M 2.8GHz 3MB 2c L1 PGAProcessor	102500297	N
		Intel i7-3820QM 2.7GHz 4MB 4c E1 PGAProcessor	102500304	N
		Intel i7-3720QM 2.6GHz 4MB 4c E1 PGAProcessor	102500306	N
		Intel i7-3610QM 2.3GHz 6MB 4c E1 PGAProcessor	102500289	N
		Intel B970 2.3G Q0 2M 2cPGA Processor	102500230	N
		I3-2328M SANDY BRIDGE J-1 3MB 2c PGA 2.2GHz STD 35W	102500421	N
		Intel I7-3630QM 2.4G E1 6M 4cPGA Processor	102500436	N
		Intel B960 2.20G 2M 35W SNB PGA Processor	102500133	N
		Intel I3-3120M 2.5G L1 3M 2cPGA CPU	102500435	N
		Intel I3-3130M 2.6G 3M 2cPGA CPU	102500487	N
		Intel I5-3230M 2.6G 3M 2cPGA CPU	102500486	N
	2GB PC3-12800 1600MHz DDR3 SODIMM	M471B5773DH0-CK0	1100226	N
		HMT325S6CFR8C-PB	1100227	N
		MT8KTF25664HZ-1G6M1	1100228	N
		Elp_R J2108BDBG-GN-F 2GB D3-1600SMemory	1100425	N
		M471B5773CHS-CK0 2GB D3-1600SMemory-HF	1100614	N
		Mic_S D9PFJ 2GB D3-1600SMemory SM322NQ08IBF	1100646	N
	4GB PC3-12800 1600MHz DDR3 SODIMM	M471B5273DH0-CK0	1100230	N
		HMT351S6CFR8C-PB	1100231	N
		MT16KTF51264HZ-1G6M1	1100232	N
		Elp_R J2108BDBG-GN-F 4GB D3-1600SMemory	1100426	N
		M471B5273CH0-CK0 4GB D3-1600SMemory-HF	1100613	N
		Mic_S D9PFJ 4GB D3-1600SMemory	1100641	N
4	500G 5400rpm SATAII HDD	Seagate ST9500325AS 500G 9NB HDD	16004189	N
		HT HTS547550A9E384 5400RPM 500G HDD	16200006	N
		WD WD5000BPVT-24HXZ 5400RPM 500G HDD 9.5mm 4k sector	16004846	N
		WD WD5000BPVT-24A1YT0 5400PRM 9.5mm 500 HDD	16200089	N
		HGST Jaguar B7 500G/P SATA2.0 5400RPM interface 4K sector generation	16200067	N
		Seagate Yarra-1D 500G/P SATA2.0 5400RPM interface 4K sector generation	16200211	N
		ST500LM012 5.4K 9.5 500G HDD	16200210	N

		WD5000LPVT-08G33T1 7mm 5.4K rpm 500G HDD	16200264	N
	750G 5400rpm SATAII HDD	WD WD7500BPVT-24HXZT3 5400RPM 750G HDD	16004848	N
		HT HTS547575A9E384 5400RPM 750G HDD 9.5mm	16200008	N
		WD WD7500BPVT-24A1YT0 5400PRM 9.5mm 750 HDD	16200088	N
		HGST Jaguar B 750G/P SATA2.0 5400RPM interface 4K sector generation product	16200192	N
		ST750LM022 5.4K 9.5 750G HDD	16200209	N
	1TB 5400RPM SATAII HDD	HGST Jaguar B 1TB/P SATA2.0 5400RPM interface 4K sector generation product	16200193	N
		WD WD10JPVT-24A1YT0 5400PRM 9.5mm 1T HDD	16200071	N
		ST1000LM024 5.4K 9.5 1T HDD	16200208	N
20	SSD 64G	Samsung PM830 64G mSATA SSD	16200109	N
8	ODD-Tray-in DVD Rambo	HLDS GT50N Slim Tray Rambo ODD-LH	25201635	N
		TSST SN-208AB Slim Rambo ODD W/O Bezel-LH	25201108	N
		Optiarc AD-7740H Slim Rambo ODD W/O Bezel-LH	25201106	N
		PLDS DS-8A8SH Slim Rambo ODD-LH	25201487	N
		HLDS GT80N Slim SATA Rambo ODD W/O Bezel-LH	25209015	N
		PLDS DS-8A9SH Slim Tray Rambo W/O Bezel-LH	25209016	N
		TSST SN-208DB Slim Rambo ODD W/O Bezel-LH	25209014	N
	ODD-Tray-in BD Combo	PLDS DS-6E2SH BDCombo W/O Bezel-LH (BE)	25200328	N
		HLDS CT40N Slim BD Combo W/O Bezel-LH	25201493	N
		Optiarc BC-5550H BD Combo W/O Bezel-LH	25204159	N
		TSST TS-LB23D BDCombo W/O Bezel-LH (BE)	25200329	N
	150W Adapter	FSP150-RAB 150W ADAPTER®	36001876	1
		Liteon PA-1151-11VA 150w adapter®	36001875	1
	120W Adapter	DeltaADP-120ZB BBGP 120W ADAPTER(R)	36001857	1
		LiteonPA-1121-04LA 120WAdapter	36200226	1
	Power Cord	longwell Black Single-end 1.0m3wire ULCSAPower Cable	31033857	1
		Volex 1.0m C5 US Power Cable	31033858	1
		Luxshare 1.0m C5 US Power Cable	31049517	1
		longwell Black Single-end 1.0m SAAPower Cable	31035397	1
		Volex 1.0m C5 Austrilian Power Cable	31049500	1

		Luxshare 1.0m C5 Austrilian Power Cable	31049520	1
		1.0M C5 JPN power cord with converter®	31038887 line cord + 31039655 3pin2pin converter	1
		Volex 1m C5 Japan Power Cable	31049506 line cord + 31039655 3pin2pin converter	1
		Luxshare 1.0m C5 Japan Power Cable	31049519 line cord + 31039655 3pin2pin converter	1
		Grandsun Black Single-end 1.0m 3wire CCC Power Cable(R)	31032953	1
		Luxshare 1.0M C5 CCC Power Cable	31045147	1
		longwell Black Single-end 1.0m ASTA Power Cable	31035396	1
		Volex 1.0m C5 UK Power Cable	31049496	1
		longwell Black Single-end 1.0m VDE Power Cable	31035332	1
		Volex 1.0m C5 Europe Power Cable	31049497	1
		Luxshare 1.0m C5 Europe Power Cable	31049518	1
		longwell Black Single-end 1.0m India Power Cable	31035395	1
		Longwell Black Single-end 1.0m Italy C5 Power Cable®	31039104	1
		Volex 1.0m C5 ItalyPower Cable	31049504	1
		Longwell Black Single-end 1.0m Brazil Power Cable®	31035828	1
		Volex 1.0m C5 BrazilPower Cable	31049505	1
		Longwell Black Single-end 1.0m Argentina C5Power Cable®	31039100	1
		Volex 1.0m C5 US Power Cable	31049507	1
		Longwell Black Single-end 1.0m Denmark C5Power Cable®	31039101	1
		Volex 1.0m C5 Denmark Power Cable	31049503	1
		Longwell Black Single-end 1.0m Switzerland C5Power Cable®	31039103	1
		Volex 1.0m C5 Switzerland Power Cable	31049508	1
		Longwell Black Single-end 1.0m Israel C5Power Cable®	31039107	1
		Volex 1.0m C5 Israel Power Cable	31049502	1
		Longwell Black Single-end 1.0m Taiwan C5Power Cable®	31038885	1
		Volex 1.0m C5 Taiwan Power Cable	31049499	1

		Longwell Black Single-end 1.0m Korea C5Power Cable®	31039106	1
		Volex 1.0m C5 Korea Power Cable	31049498	1
		Longwell Black Single-end 1.0m SA C5Power Cable®	31039105	1
		Volex 1.0m C5 SA Power Cable	31049501	1
21	TV-Tuner card	CastleNet RTL8188CU USB 11N WiFi module	NA	N
		Avermedia H334 DVB-T Mini TV Card	11201071	N
		Avermedia H339BB DVB-T Mini TV Card	11200290	N
		Avermedia H334 ATSC Mini TV Card	11201072	N
		Avermedia H339BA ATSC Mini TV Card	11200291	N
	Remote Controller	PhilipsWin8 IR White Controller	888900007	N
		PhilipsWin7 IR Receiver(R)	888010662	N
16	Bluetooth module	Cbt BCM920702 BT4.0 EDR Flash U NB BT	20200056	N
		Ltn BCM920702 BT4.0 EDR Flash U NB BT	20200057	N
14	Camera	Bison M720P OV9712 R Sponge CAM	20200314	N
		CCY M720P OV9712 R Sponge CAM	20200315	N
		Bison M720P VC OV9712 2DMIC R Sponge CAM	20200435	N
		CCY M720P VC OV9712 2DMIC R Sponge CAM	20200436	N
	Mouse	Liteon SM-8861(WW) Mouse Silver	25203606	1
		Liteon SM-8861 Mouse(MY) Silver	25203608	1
		Liteon SM-8861 Mouse(No Battery) Silver	25203607	1
		Liteon SM-8861(JP) Mouse-Silver	25205774	1
		Liteon N70 2.4G mouse+D for Silver Silk	25209297	1
		Liteon N70 2.4G mouse+D for S Silk JP	25210202	1
	Keyboard	Liteon SK-8861(GB) 2.4G KB only-Silver8	25209294	1
		Liteon SK-8861(FR) 2.4G KB only-Silver8	25209295	1
		Liteon SK-8861(DE) 2.4G KB only-Silver8	25209296	1
		Liteon SK-8861(US) 2.4G KB only-Silver8	25209812	1
		Liteon SK-8861(EN-FR) 2.4G KB Only-S8	25210193	1
		Liteon SK-8861(TH) 2.4G KB Only-Silver8	25210195	1
		Liteon SK-8861(BE-EN) 2.4G KB Only-S8	25210197	1
		Liteon SK-8861(US-EU) 2.4G KB Only-S8	25210198	1
		Liteon SK-8861(RU) 2.4G KB-Silver8	25210199	1
		Liteon SK-8861(CS-SK) 2.4G KB-Silver8	25210200	1
		Liteon SK-8861(JP) 2.4G KB Only-Silver8	25210201	1
		Liteon SK-8861(Nordic) 2.4G KB Only-S8	25210652	1
		Liteon SK-8861(IT) 2.4G KB Only-Silver8	25210653	1
		Liteon SK-8861(CH) 2.4G KB Only-Silver8	25210752	1
		Liteon SK-8861(TW) S-Silk KB-Silver (WW)	90200539	1

		Liteon SK-8861(TH) S-Silk KB-Silver (WW)	90200540	1
		Liteon SK-8861(BE) S-Silk KB-Silver (WW)	90200541	1
		Liteon SK-8861(DE) S-Silk KB-Silver (WW)	90200542	1
		Liteon SK-8861(GB) S-Silk KB-Silver (WW)	90200543	1
		Liteon SK-8861(IL) S-Silk KB-Silver (WW)	90200544	1
		Liteon SK-8861(IT) S-Silk KB-Silver (WW)	90200545	1
		Liteon SK-8861(IS) S-Silk KB-Silver (WW)	90200546	1
		LiteonSK-8861(Nordic)S-SilkKB-Silver (WW)	90200547	1
		Liteon SK-8861(NL) S-Silk KB-Silver (WW)	90200548	1
		LiteonSK-8861(EN-FR)S-SilkKB-Silver (WW)	90200549	1
		Liteon SK-8861(US) S-Silk KB-Silver (WW)	90200550	1
		Liteon SK-8861(PT) S-Silk KB-Silver (WW)	90200551	1
		Liteon SK-8861(FR) S-Silk KB-Silver (WW)	90200552	1
		Liteon SK-8861(ES) S-Silk KB-Silver (WW)	90200553	1
		Liteon SK-8861(JP) S-Silk KB-Silver (WW)	90200554	1
		Liteon SK-8861(US-IN)S-SilkKB-Silver (WW)	90200555	1
		Liteon SK-8861(SA) S-Silk KB-Silver (WW)	90200556	1
		Liteon SK-8861(BR) S-Silk KB-Silver (WW)	90200557	1
		Liteon SK-8861(CS-SK)S-SilkKB-Silver (WW)	90200558	1
		Liteon SK-8861(GR) S-Silk KB-Silver (WW)	90200559	1
		Liteon SK-8861(KR) S-Silk KB-Silver (WW)	90200560	1
		Liteon SK-8861(LA) S-Silk KB-Silver (WW)	90200561	1
		Liteon SK-8861(RU) S-Silk KB-Silver (WW)	90200562	1
		Liteon SK-8861(US-EU)S-SilkKB-Silver (WW)	90200563	1
		Liteon SK-8861(SL) S-Silk KB-Silver (WW)	90200564	1
		Liteon SK-8861(BG) S-Silk KB-Silver (WW)	90200565	1
		Liteon SK-8861(HU) S-Silk KB-Silver (WW)	90200566	1
		Liteon SK-8861(TR) S-Silk KB-Silver (WW)	90200567	1
		Liteon SK-8861(US-MY)S-SilkKB-Silver (WW)	90200568	1
		Liteon SK-8861(LA-AR)S-SilkKB-Silver (WW)	90200569	1

Chapter 9. General information

This chapter provides general information that applies to all computer models covered by this manual.

Additional Service Information

This chapter provides additional information that the service representative might find helpful.

Power management

Power management reduces the power consumption of certain components of the computer such as the system power supply, processor, hard disk drives, and some monitors.

Advanced configuration and power interface (ACPI) BIOS

As this computer has an ACPI BIOS system, the operating system is allowed to control the power management features of the computer and the settings for Advanced Power Management (APM) BIOS mode is ignored. Not all operating systems support ACPI BIOS mode.

Automatic Power-On features

The Automatic Power-On features within the Power Management menu allow you to enable and disable features that turn on the computer automatically.

- Wake Up on Alarm: You can specify a date and time at which the computer will be turned on automatically. This can be either a single event , a daily event or a weekly event.
- Wake Up on LAN: This feature allows LAN adapter card to wake the System.

© Copyright Lenovo 2012